



MARUYAMA
JAPAN




www.rozkwit.com.pl



 **MARUYAMA MFG. CO., INC.**

HANDLE-2


(MX21H/MX24H/MX27H/MX33H)

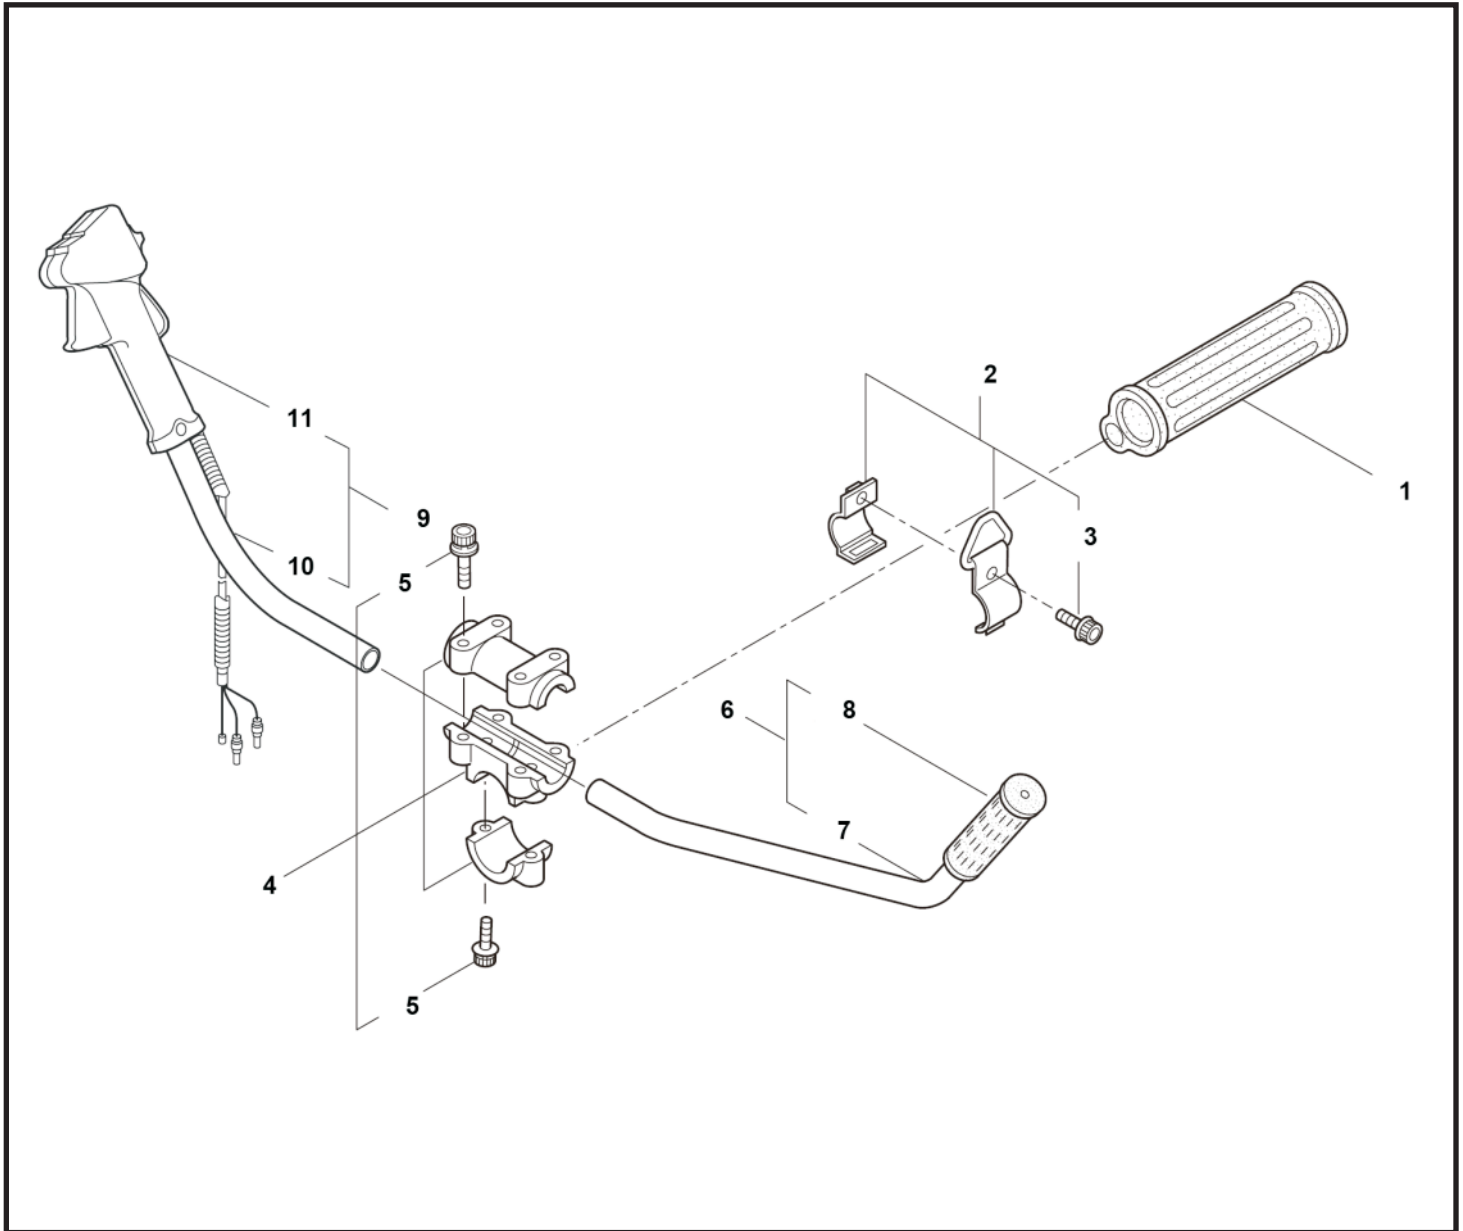

Model		MX21H			MX24H			MX27H			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Shaft Grip	215532	1			←			←			←	
2	Hanging Bracket Ass'y	215533	1	Incl.3		←			←			←	
3	Cap Screw	261762	1	M5x14		←			←			←	
4	Bracket Ass'y	216935	1	Incl.5		←			←			←	
5	Cap Screw	261246	6	M5x25		←			←			←	
6	Handle Ass'y-Left	229859	1	Incl.7,8		←			←			←	
7	Handle	221441	1			←			←			←	
8	Grip	226503	1			←			←			←	
9	Handle Ass'y-Right	230798	1	Incl.10,11		←		223964	1	Incl.10,11	229072	1	Incl.10,11
10	Handle	223286	1			←			←			←	
11	Throttle Trigger	230791	1			←		223156	1		229004	1	

OUTER TUBE-1


(MX21/MX21H/MX24/MX24H)

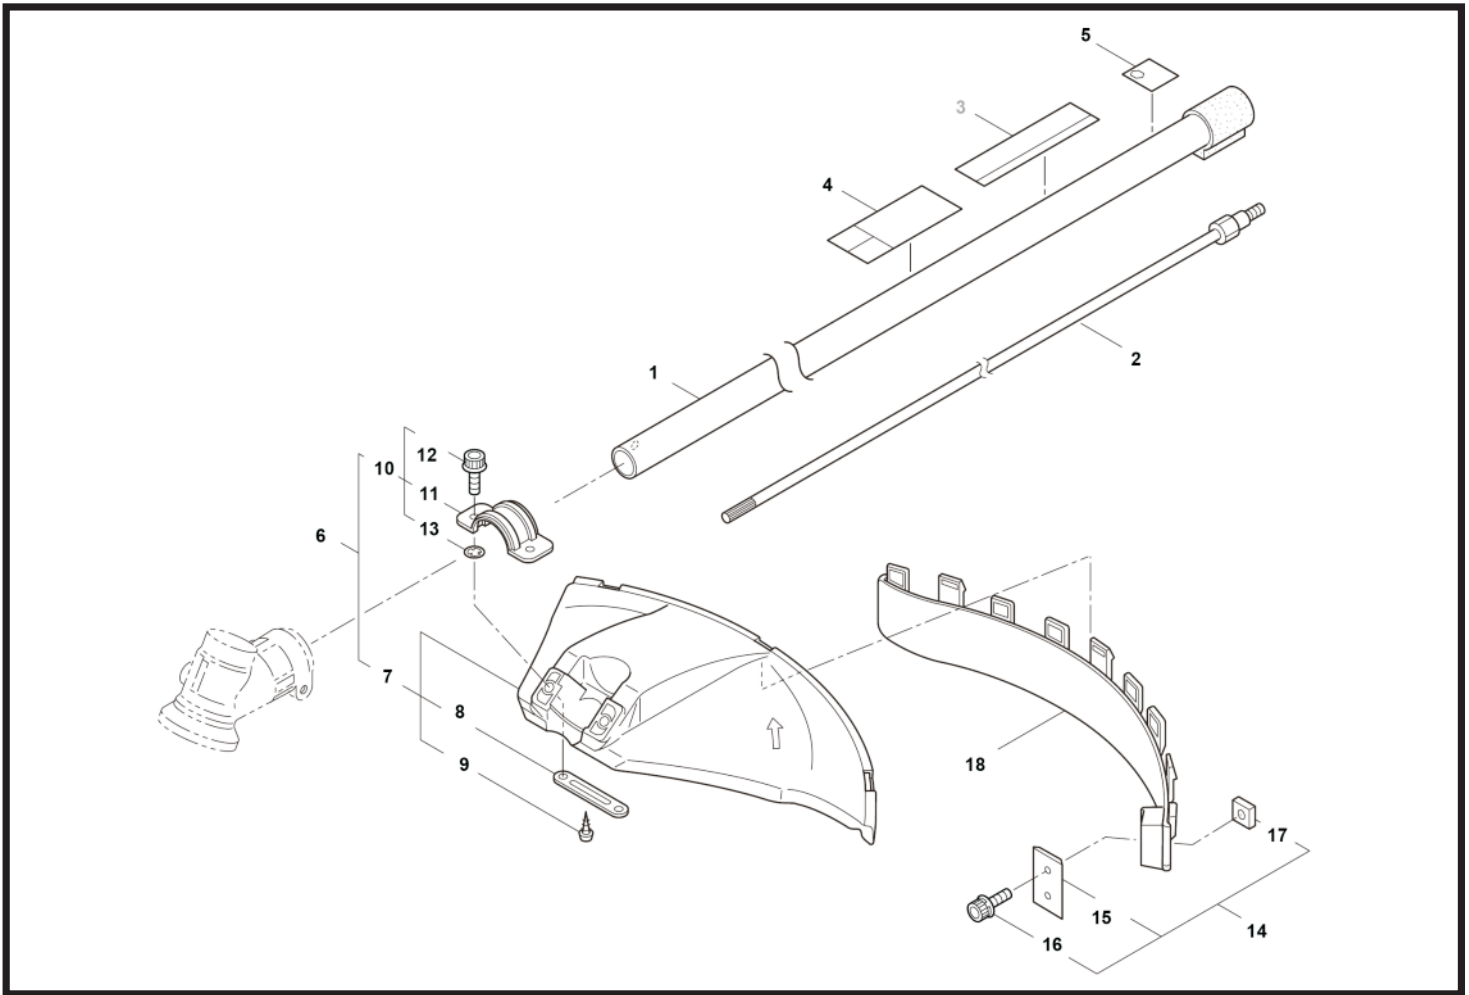

Model	MX21			MX21H			MX24			MX24H			
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Driveshaft Tube	224123	1		223252	1		224123	1		223252	1	
2	Driveshaft Ass'y	226399	1		←			←			←		
3	Label	233260	1	MX21	233266	1	MX21H	233272	1	MX24	233278	1	MX24H
4	Label	223188	1		←			←			←		
5	Label	233477	1	110dBA	←			228043	1		←		
6	Safety Cover Ass'y	232075	1	Incl.7-13	←			←			←		
7	Safety Cover Ass'y	231232	1	Incl.8,9	←			←			←		
8	Bracket	227819	1		←			←			←		
9	Screw	221580	1	4x8	←			←			←		
10	Bracket Ass'y	232076	1	Incl.11-13	←			←			←		
11	Bracket	227820	1		←			←			←		
12	Cap Screw	220632	2	M6x30	←			←			←		
13	Washer	231704	2	6x13xt1.0	←			←			←		
14	String Cutter Ass'y	231882	1	Incl.15-17	←			←			←		
15	String Cutter	230747	1		←			←			←		
16	Cap Screw	261250	1	M5x20	←			←			←		
17	Nut	228325	1		←			←			←		
18	Cover Extention	230748	1		←			←			←		

OUTER TUBE-2


(MX27/MX27H/MX33/MX33H)

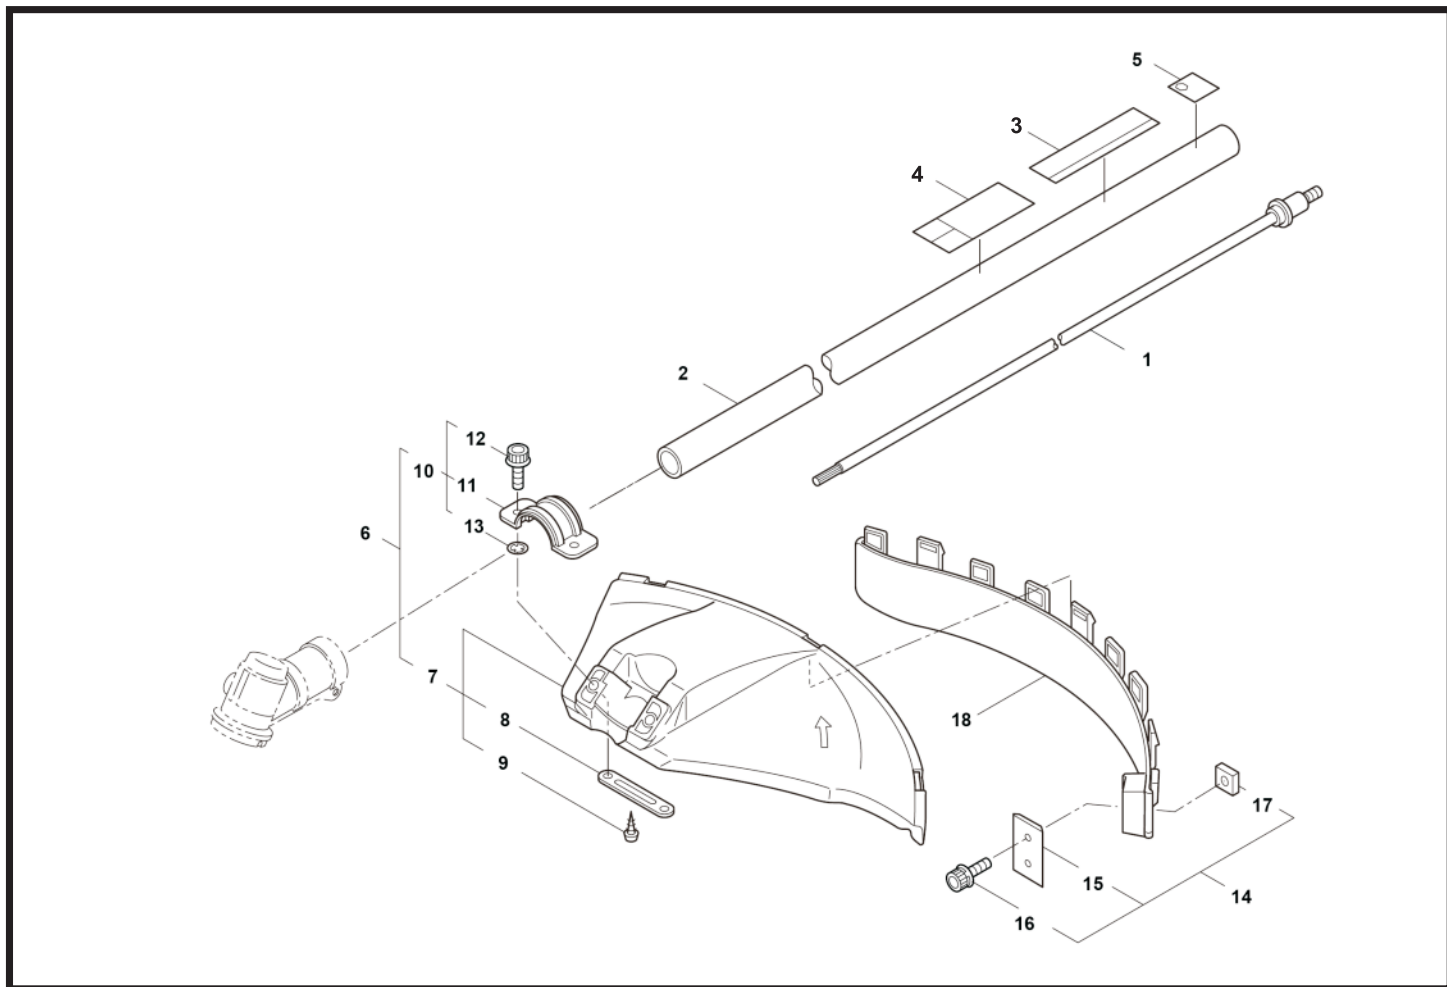

Ref	Parts name	MX27			MX27H			MX33			MX33H		
		P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Driveshaft Ass'y	219268	1		←			←			←		
2	Driveshaft Tube	224122	1		218711	1		224122	1		218711	1	
3	Label	233285	1	MX27	233291	1	MX27H	233298	1	MX33	233304	1	
4	Label	223188	1		←			←			←		
5	Label	228043	1		←			←			←		
6	Safety Cover Ass'y	232086	1	Incl.7-13	←			←			←		
7	Safety Cover Ass'y	231252	1	Incl.8,9	←			←			←		
8	Bracket	227819	1		←			←			←		
9	Screw	221580	1	4x8	←			←			←		
10	Bracket Ass'y	232087	1	Incl.11-13	←			←			←		
11	Bracket	227822	1		←			←			←		
12	Cap Screw	220632	2	M6x30	←			←			←		
13	Washer	231704	2	6x13x1.0	←			←			←		
14	String Cutter Ass'y	231882	1	Incl.15-17	←			←			←		
15	String Cutter	230747	1		←			←			←		
16	Cap Screw	261250	1	M5x20	←			←			←		
17	Nut	228325	1		←			←			←		
18	Cover Extention	230748	1		←			←			←		

GEARCASE-1


(MX21/MX21H/MX24/MX24H)

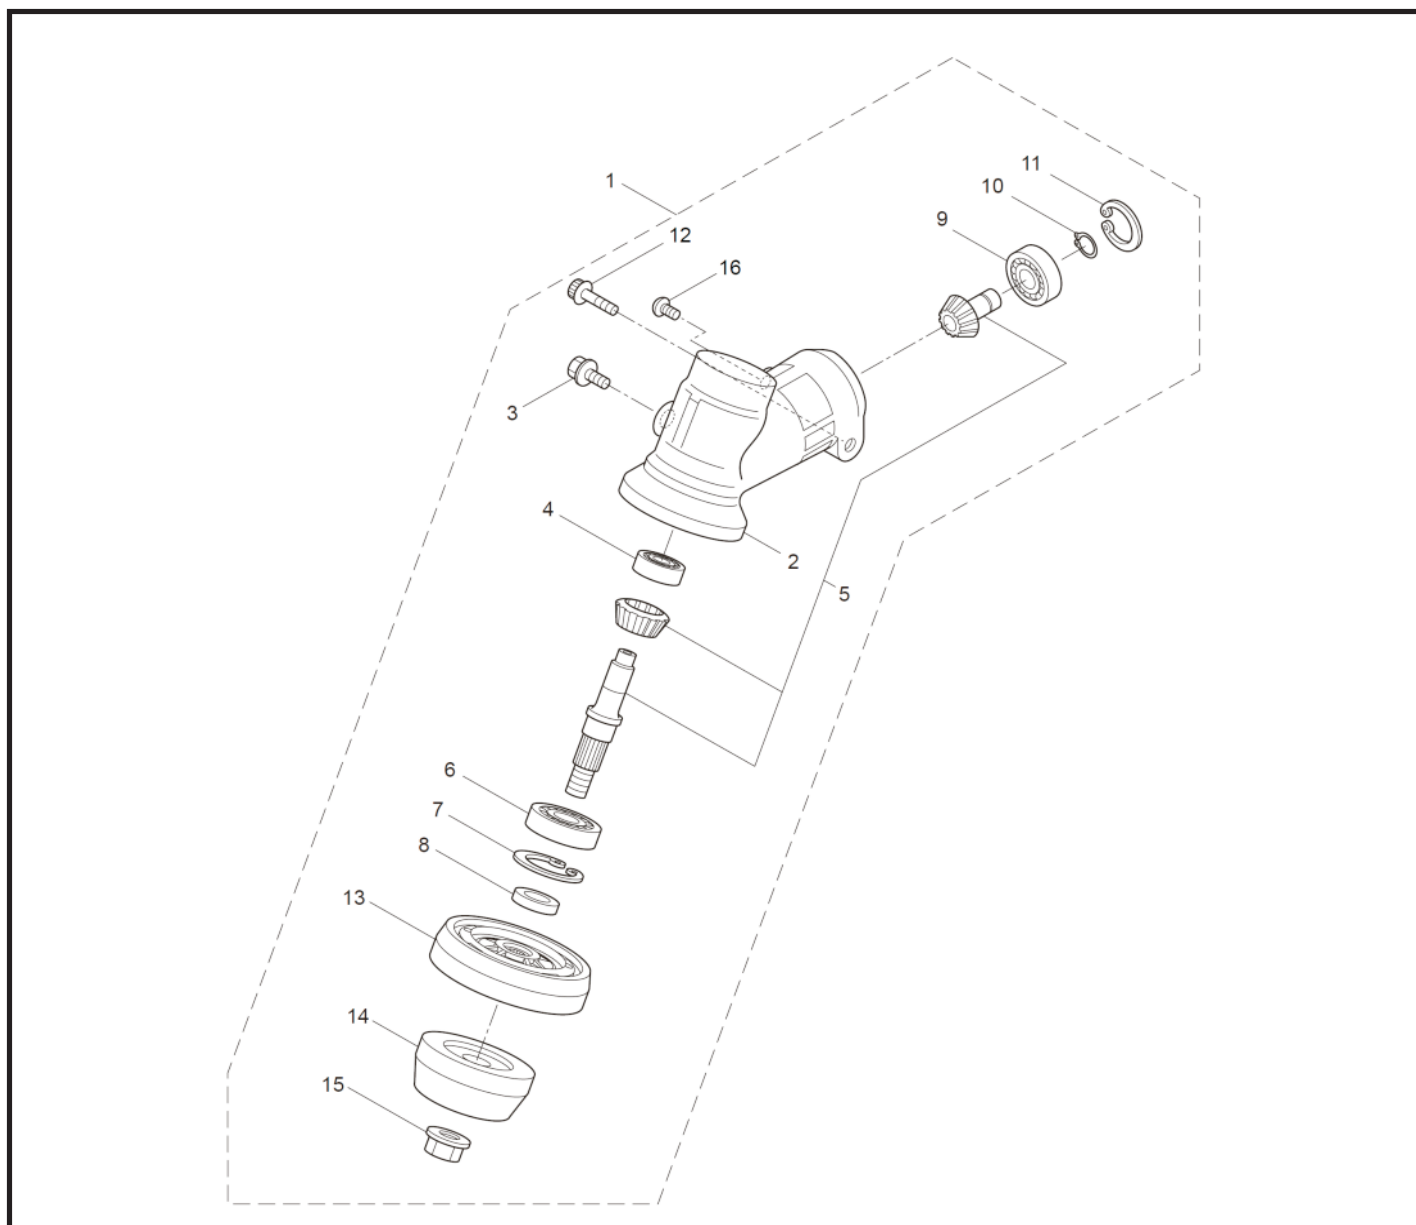

Model		MX21/MX21H			MX24/MX24H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Gearcase Ass'y	232070	1	Incl.2-15			←
2	Gearcase	226284	1				←
3	Bolt	225897	1	M6x8			←
4	Bearing	226285	1	#626			←
5	Gear Set	227108	1				←
6	Bearing	112184	1	#6000DDU			←
7	Snap Ring	054676	1	#26			←
8	Collar	225898	1	10x16xT2.6			←
9	Bearing	226286	1	#609ZZ			←
10	Snap Ring	226477	1	#9			←
11	Snap Ring	140270	1	#24			←
12	Cap Screw	261246	1	M5x25			←
13	Boss Adapter	225891	1				←
14	Blade Boss B	225892	1				←
15	Nut	225893	1	M8			←
16	Cap Screw	219087	1	M5x10			←

GEARCASE-2


(MX27/MX27H/MX33/MX33H)

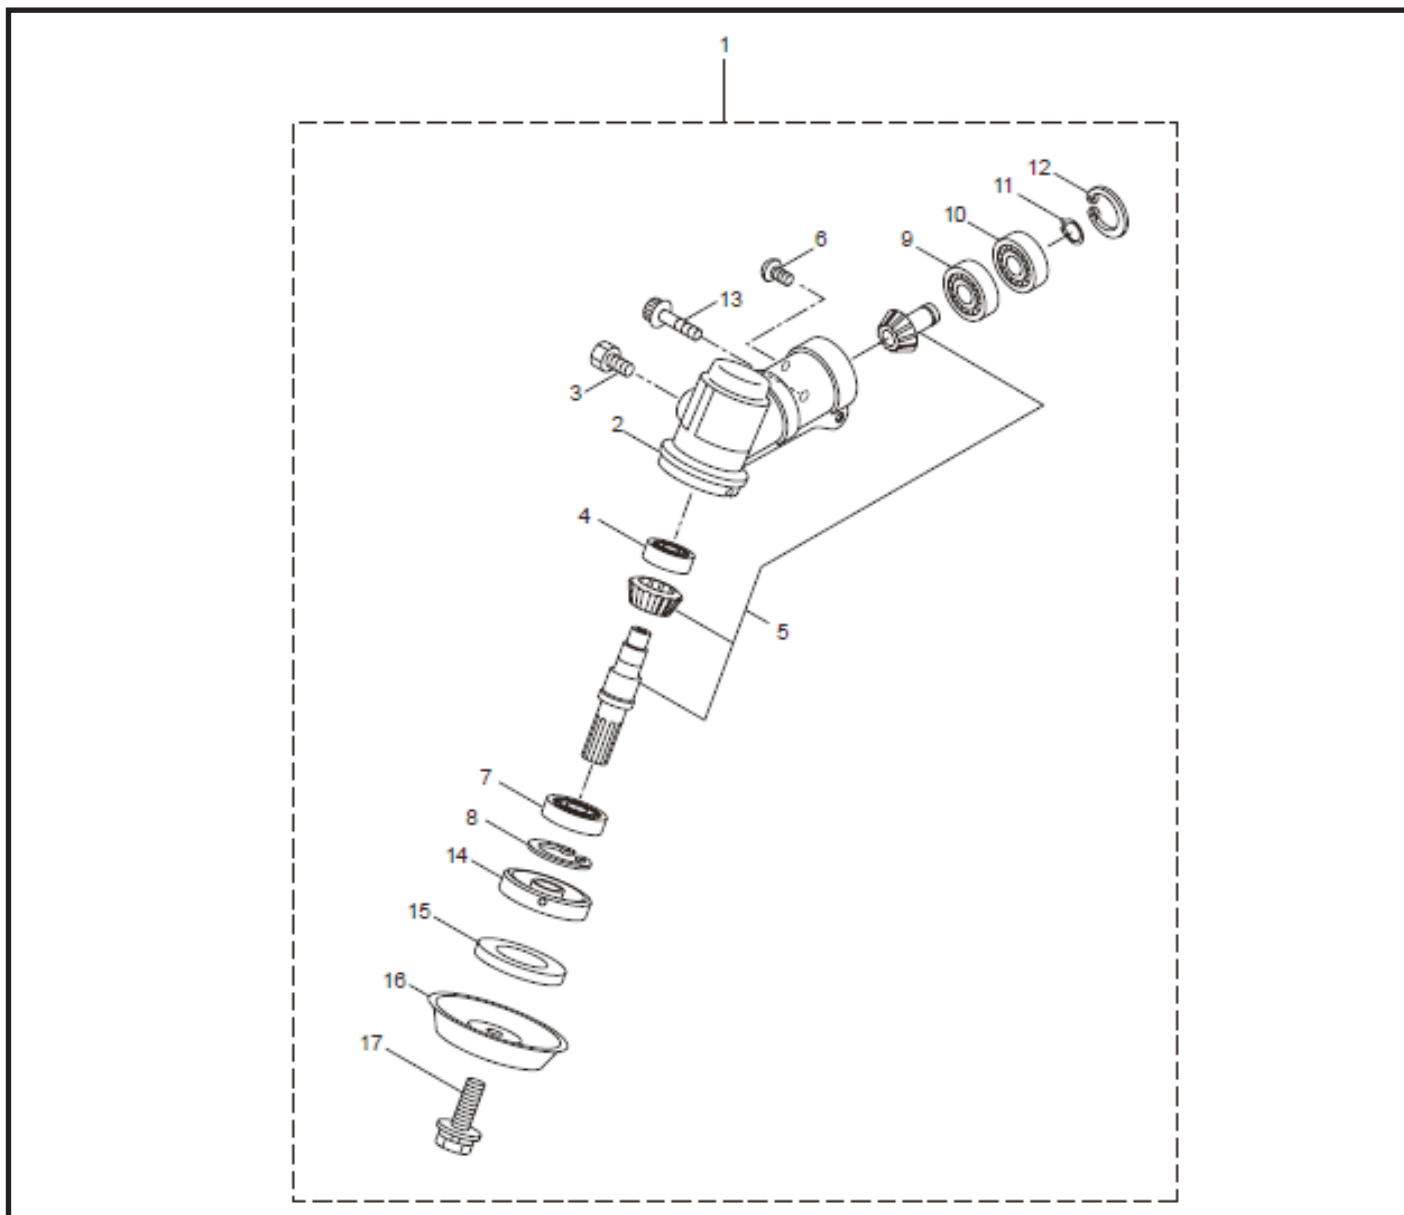

Ref	Parts name	P/N	MX27/MX27H		MX33/MX33H		
			QTY	RE	P/N	QTY	RE
1	Gearcase Ass'y	231880	1	Incl.2-17			←
2	Gearcase	225960	1				←
3	Bolt	089101	1	M8x10			←
4	Bearing	227990	1	#608			←
5	Gear Set	228416	1				←
6	Cap Screw	219087	1	M5x10			←
7	Bearing	227991	1	#6001DDU			←
8	Snap Ring	055185	1	#28			←
9	Bearing	227992	1	#609			←
10	Bearing	227993	1	#609Z			←
11	Snap Ring	228477	1	#9			←
12	Snap Ring	140270	1	#24			←
13	Cap Screw	261246	1	M5x25			←
14	Boss Adapter	212986	1				←
15	Clamping Washer	140275	1				←
16	Stabilizer	215547	1				←
17	Bolt	215610	1	M8x22, Counterclockwise			←

CLUTCH CASE-1


(MX21/MX21H/MX24/MX24H)

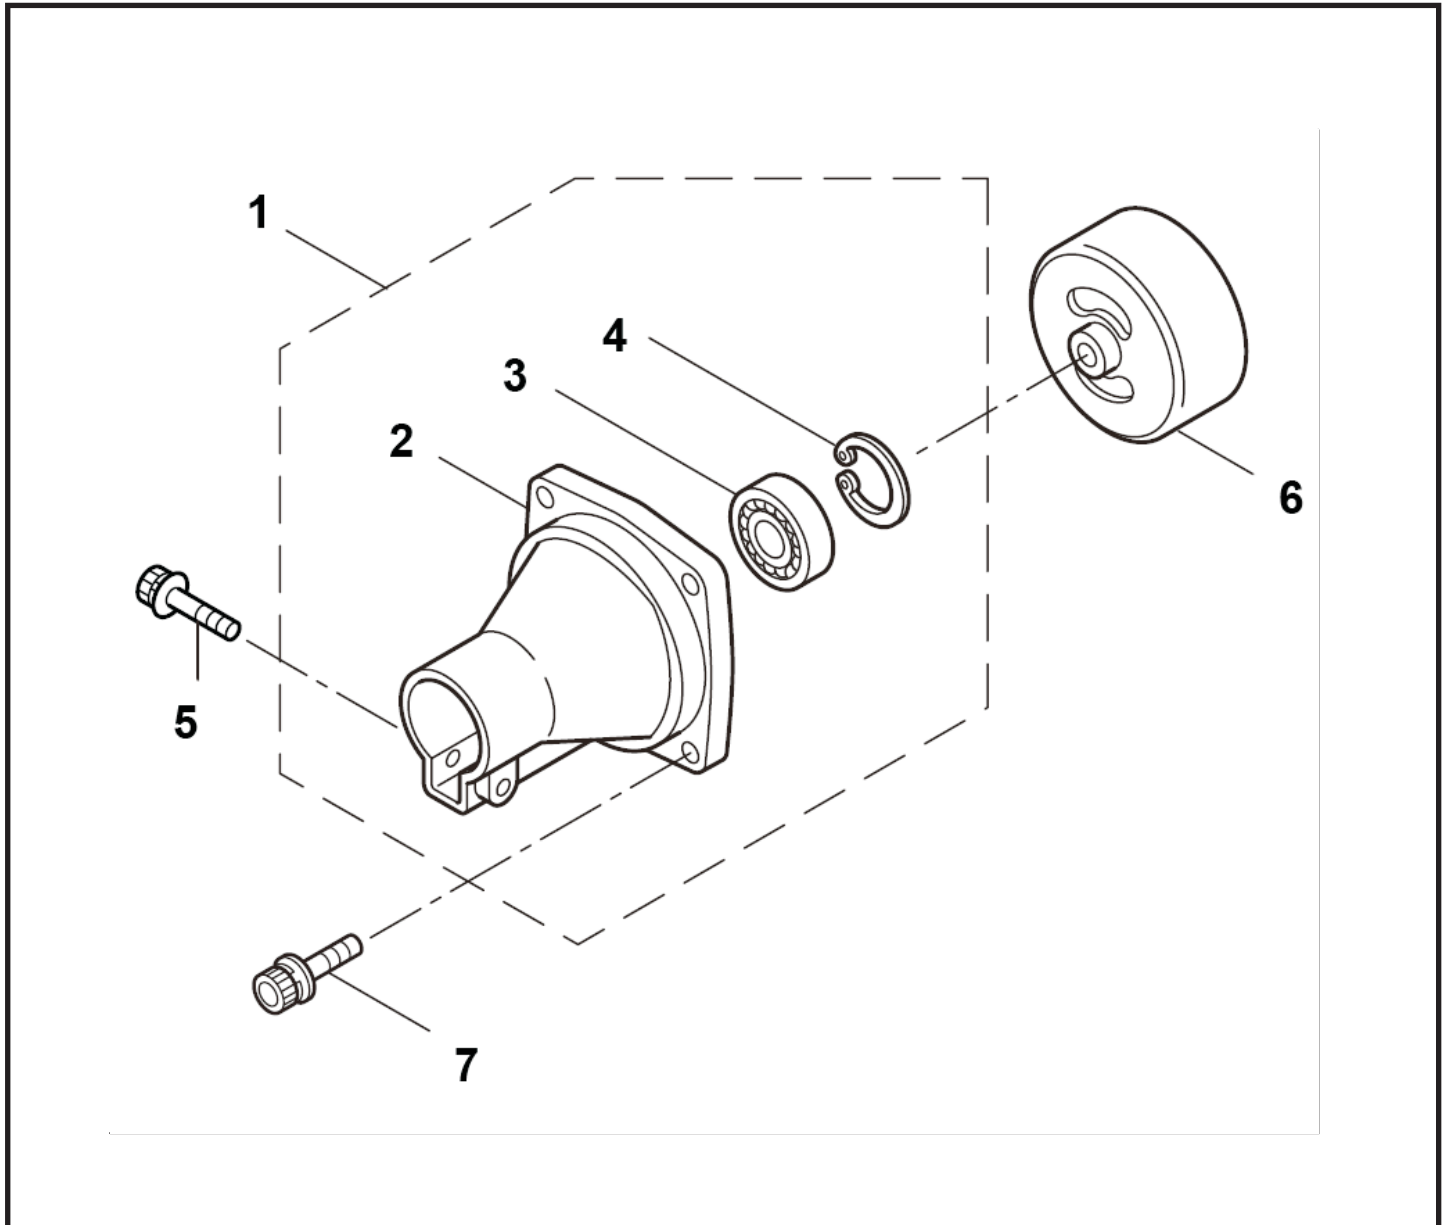

Ref	Parts name	MX21/MX21H			MX24/MX24H		
		P/N	QTY	RE	P/N	QTY	RE
1	Clutch Case Ass'y	221473	1	Incl.2-4			←
2	Clutch Case	221474	1				←
3	Bearing	016405	1				←
4	Snap Ring	013825	1	#30			←
5	Cap Screw	261612	1	M5 x 30			←
6	Clutch Drum	229091	1	54 x M7			←
7	Cap Screw	261250	4	M5 x 20			←

CLUTCH CASE-2


(MX27/MX27H/MX33/MX33H)

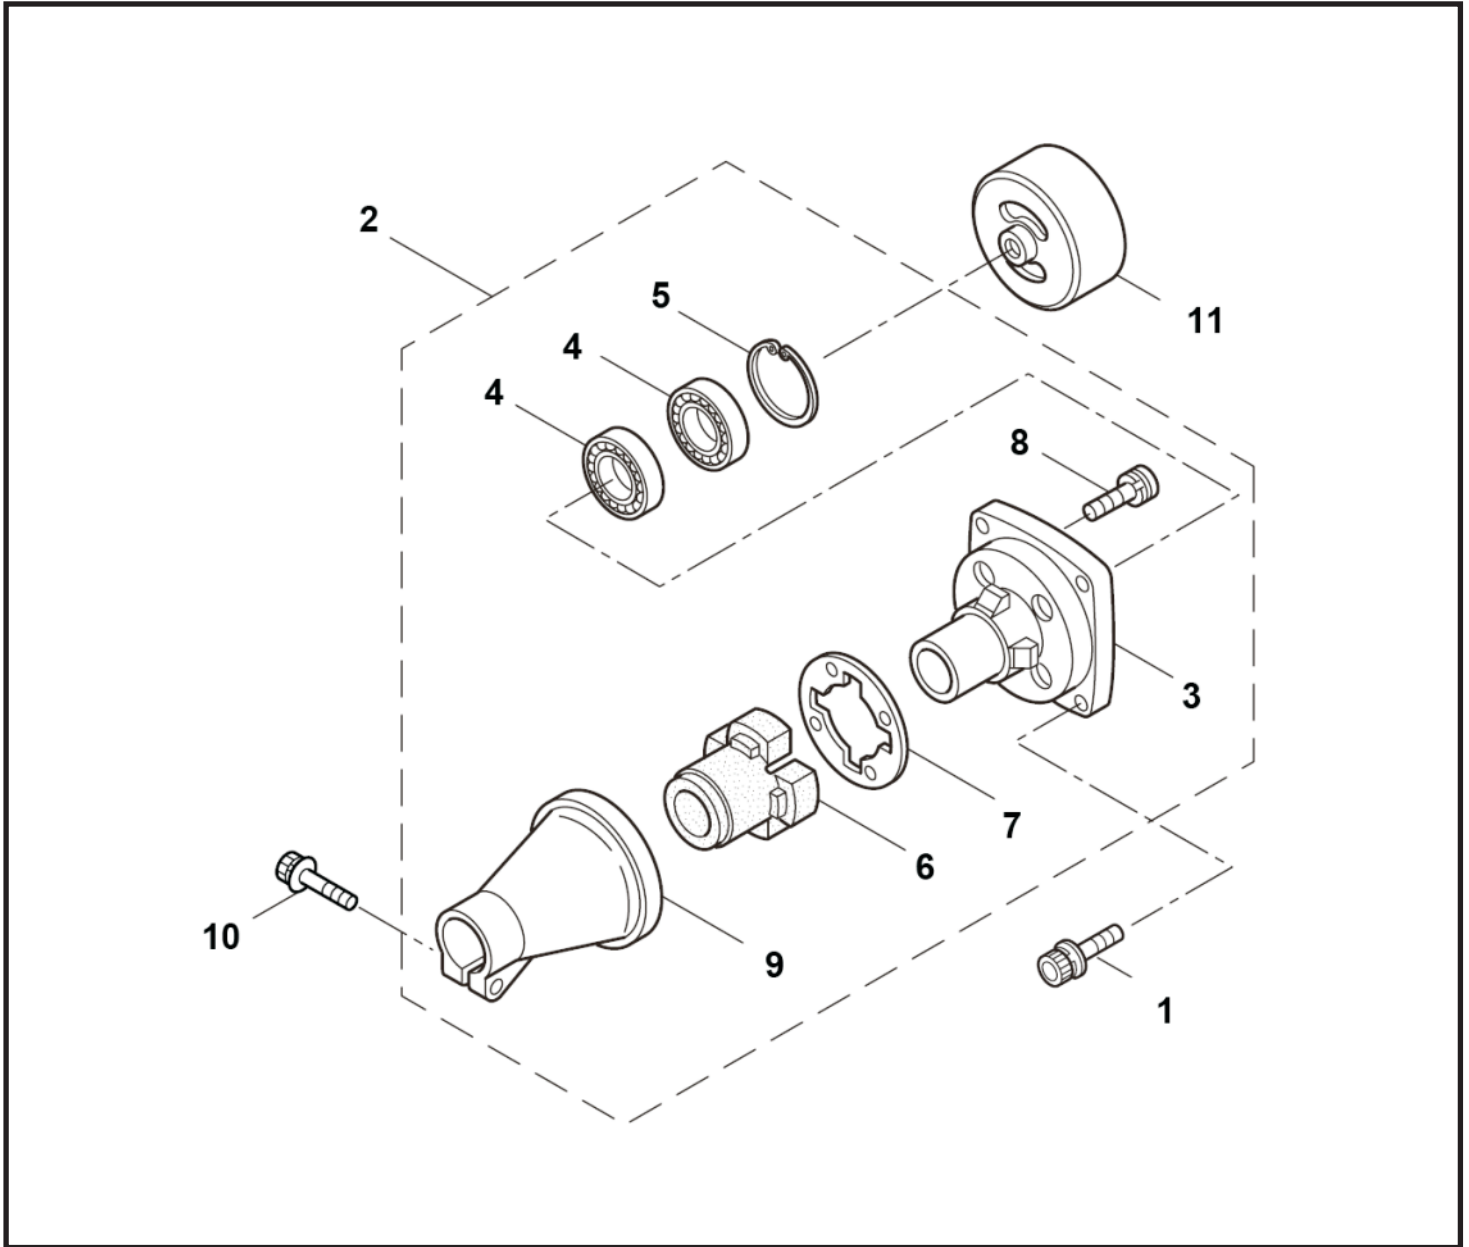

Ref	Parts number	MX27/MX27H			MX33/MX33H		
		P/N	QTY	RE	P/N	QTY	RE
1	Cap Screw	261250	4	M5x20			←
2	Clutch Case Ass'y	215512	1	Incl.3-9			←
3	Bearing Case	214592	1				←
4	Bearing	214161	2				←
5	Snap Ring	054676	1	#26			←
6	Buffer	214162	1				←
7	Washer	214163	1				←
8	Screw	092033	4	M5x15			←
9	Driveshaft Tube Adapter	214593	1				←
10	Cap Screw	261246	1	M5x25			←
11	Clutch Drum	229091	1	54 x M7	054677	1	56 x M7


CYLINDER-1

(MX21/MX21H/MX24/MX24H)

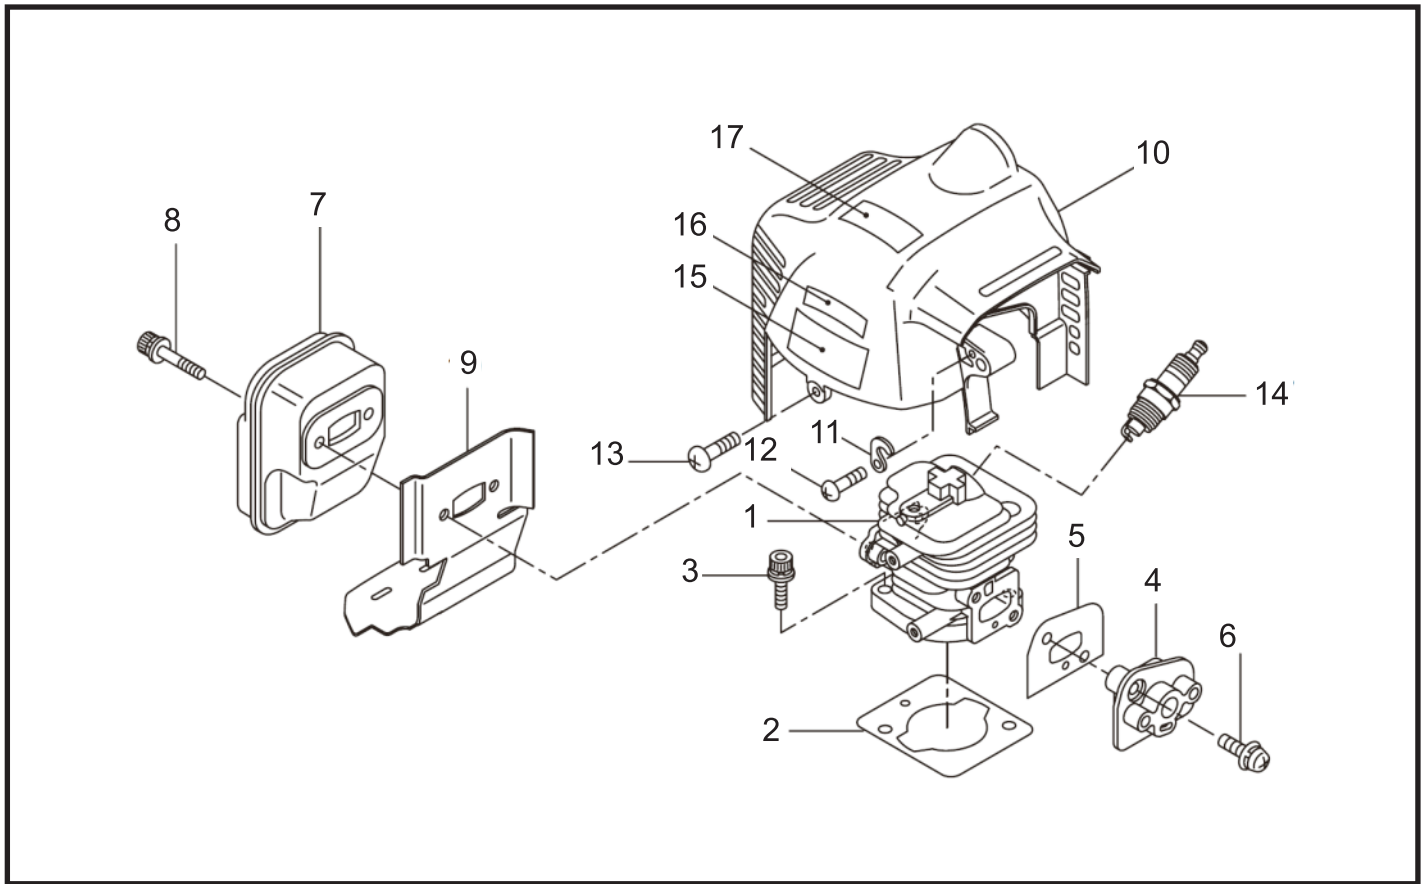


Model		MX21/MX21H			MX24/MX24H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Cylinder	268608	1		266249	1	
2	Gasket	283420	1			←	
3	Cap Screw	267290	2	M5x20		←	
4	Insulator	263772	1			←	
5	Gasket	267049	1			←	
6	Screw	269826	2	M5x25		←	
7	Muffler	281524	1			←	
8	Cap Screw	266264	2	M5x50		←	
9	Gasket	280409	1			←	
10	Top Cover	282926	1			←	
11	Hook	283983	1			←	
12	Screw	283984	1	M3x10		←	
13	Tapping Screw	280144	1			←	
14	Spark Plug	262483	1	NGK BPMR6Y		←	
15	Label	286122	1	MARUYAMA		←	
16	Label	284587	1			←	
17	Label	267561	1			←	

CYLINDER-2 (MX27/MX27H)

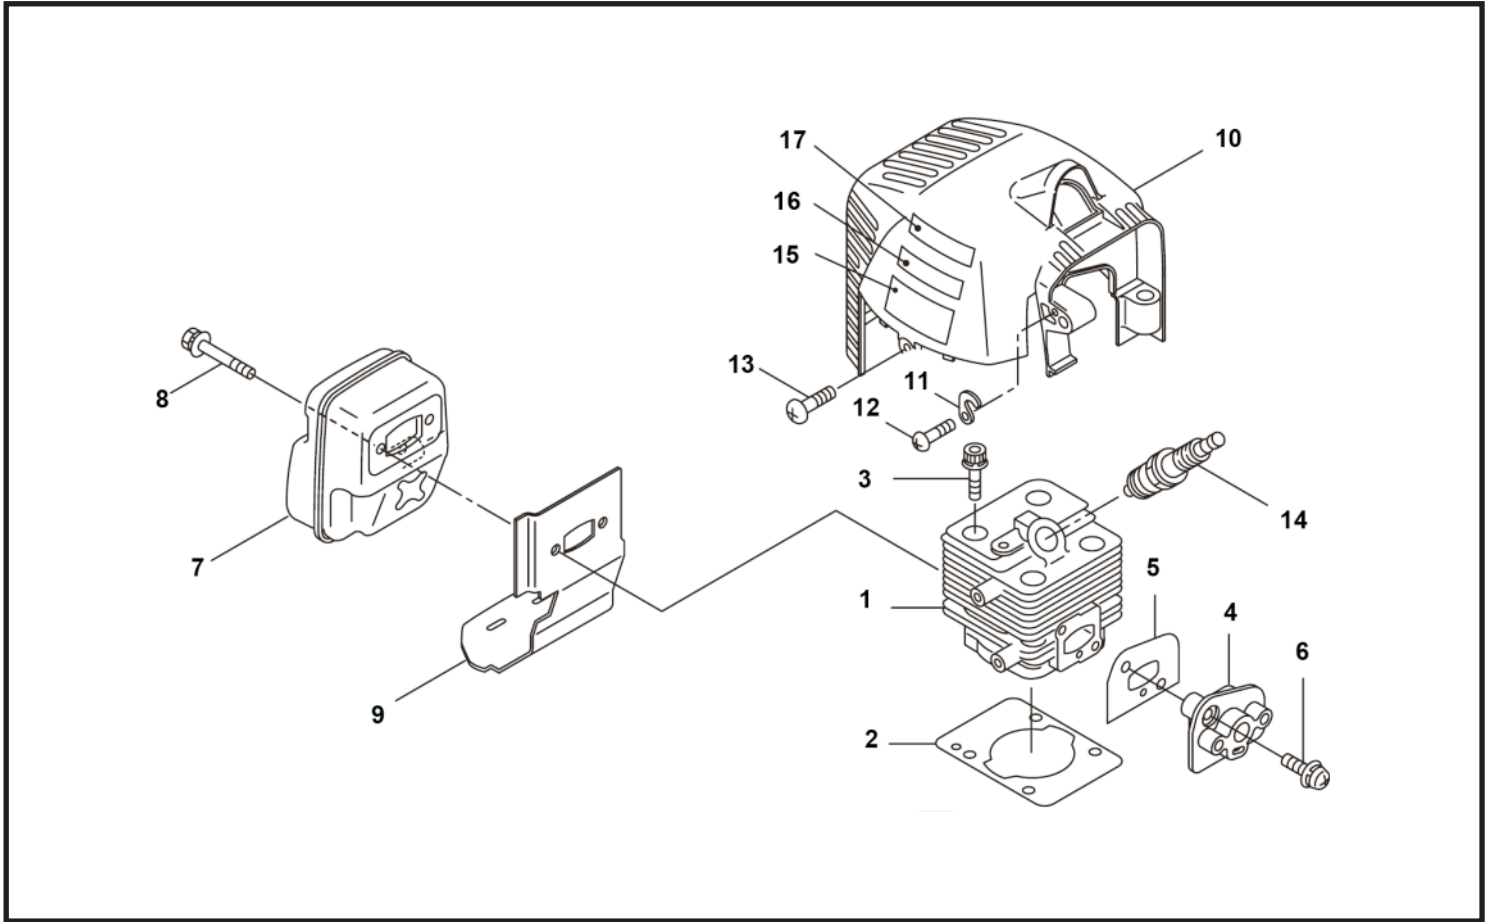


Model		MX27			MX27H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Cylinder	269140	1				←
2	Gasket	282330	1				←
3	Cap Screw	261250	4	M5x20			←
4	Insulator	263772	1				←
5	Gasket	267049	1				←
6	Screw	269826	2	M5x25			←
7	Muffer Comp.	285102	1				←
8	Cap Screw	266264	2	M5x50			←
9	Gasket	282252	1				←
10	Top Cover	285056	1				←
11	Hook	283983	1				←
12	Screw	283984	1	M3x10			←
13	Tapping Screw	280144	1				←
14	Spark Plug	262483	1	NGK BPMR6Y			←
15	Label	286122	1	MARUYAMA			←
16	Label	284587	1				←
17	Label	267561	1				←

CYLINDER-3 (MX33/MX33H)

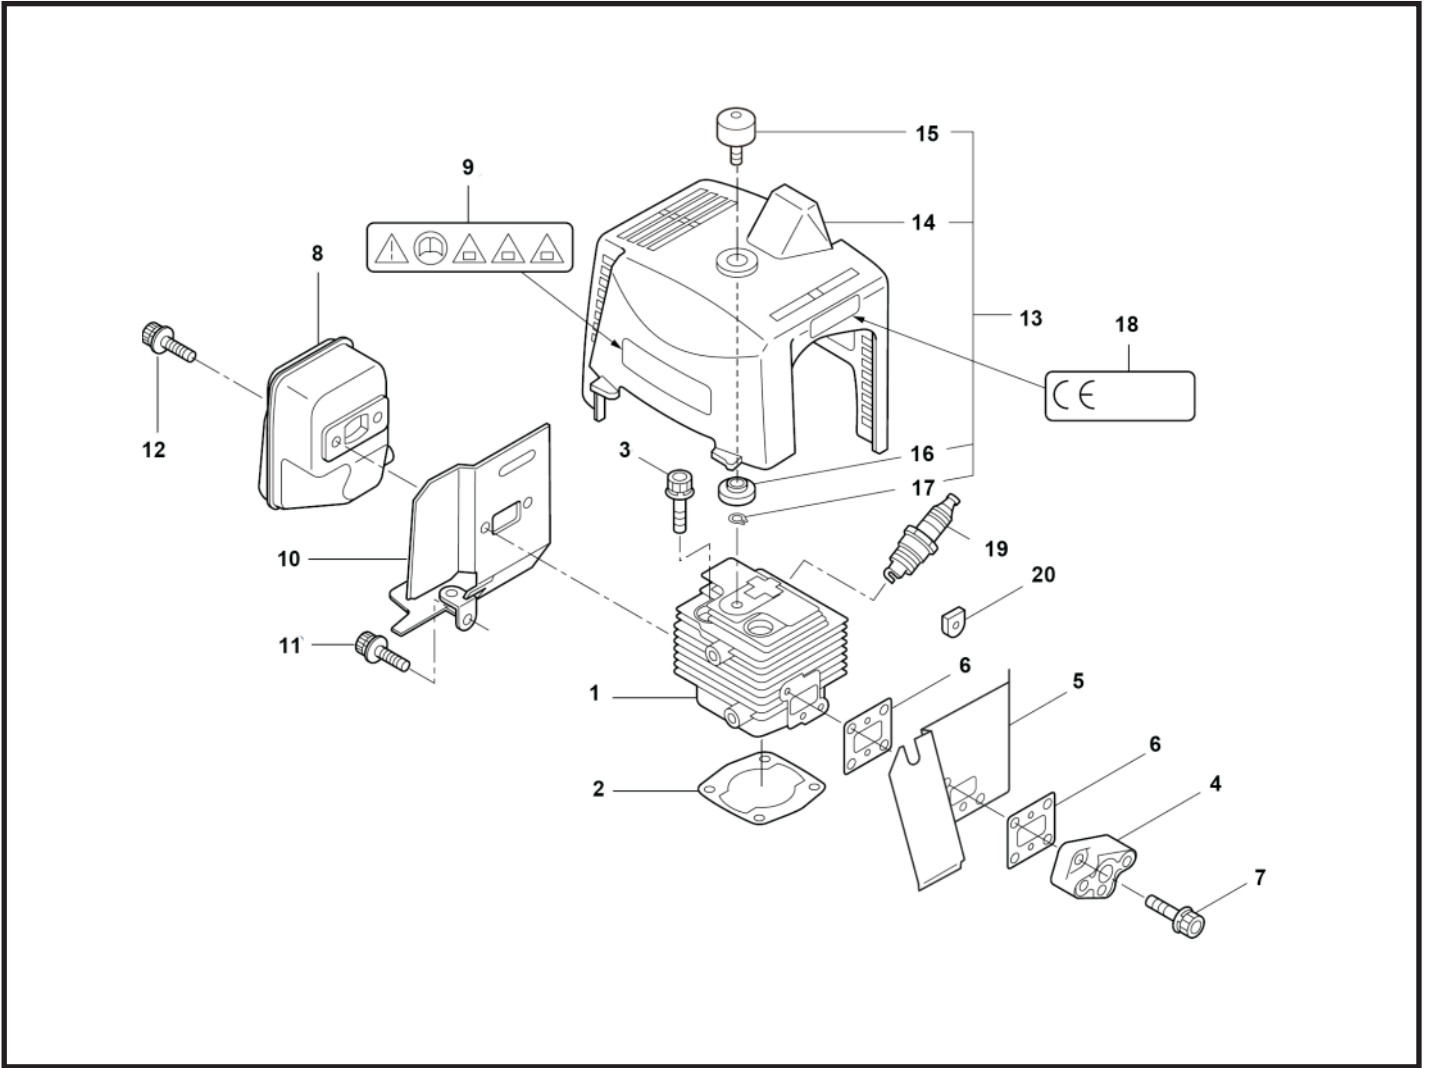


Model		MX33			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Cylinder	261360	1			←	
2	Gasket	261528	1			←	
3	Cap Screw	261250	4	M5x20		←	
4	Insulator	261938	1			←	
5	Air Duct	261364	1			←	
6	Gasket	261171	2			←	
7	Cap Screw	265924	2	M5x25		←	
8	Muffer	280619	1			←	
9	Label	265694	1			←	
10	Gasket	261833	1			←	
11	Cap Screw	261607	1	M5x16		←	
12	Cap Screw	266402	2	M5x55		←	
13	Top Cover Assy	286422	1	Incl.14-17		←	
14	Top Cover	265305	1			←	
15	Knob	286300	1			←	
16	Spacer	261020	1			←	
17	Snap Ring	261734	1	#5		←	
18	Label	267561	1			←	
19	Spark Plug	262483	1	NGK BPMR6Y		←	
20	Grommet	261202	1			←	

PISTON, CRANKCASE, CLUTCH, ROTOR-1 (MX21/MX21H/MX24/MX24H)

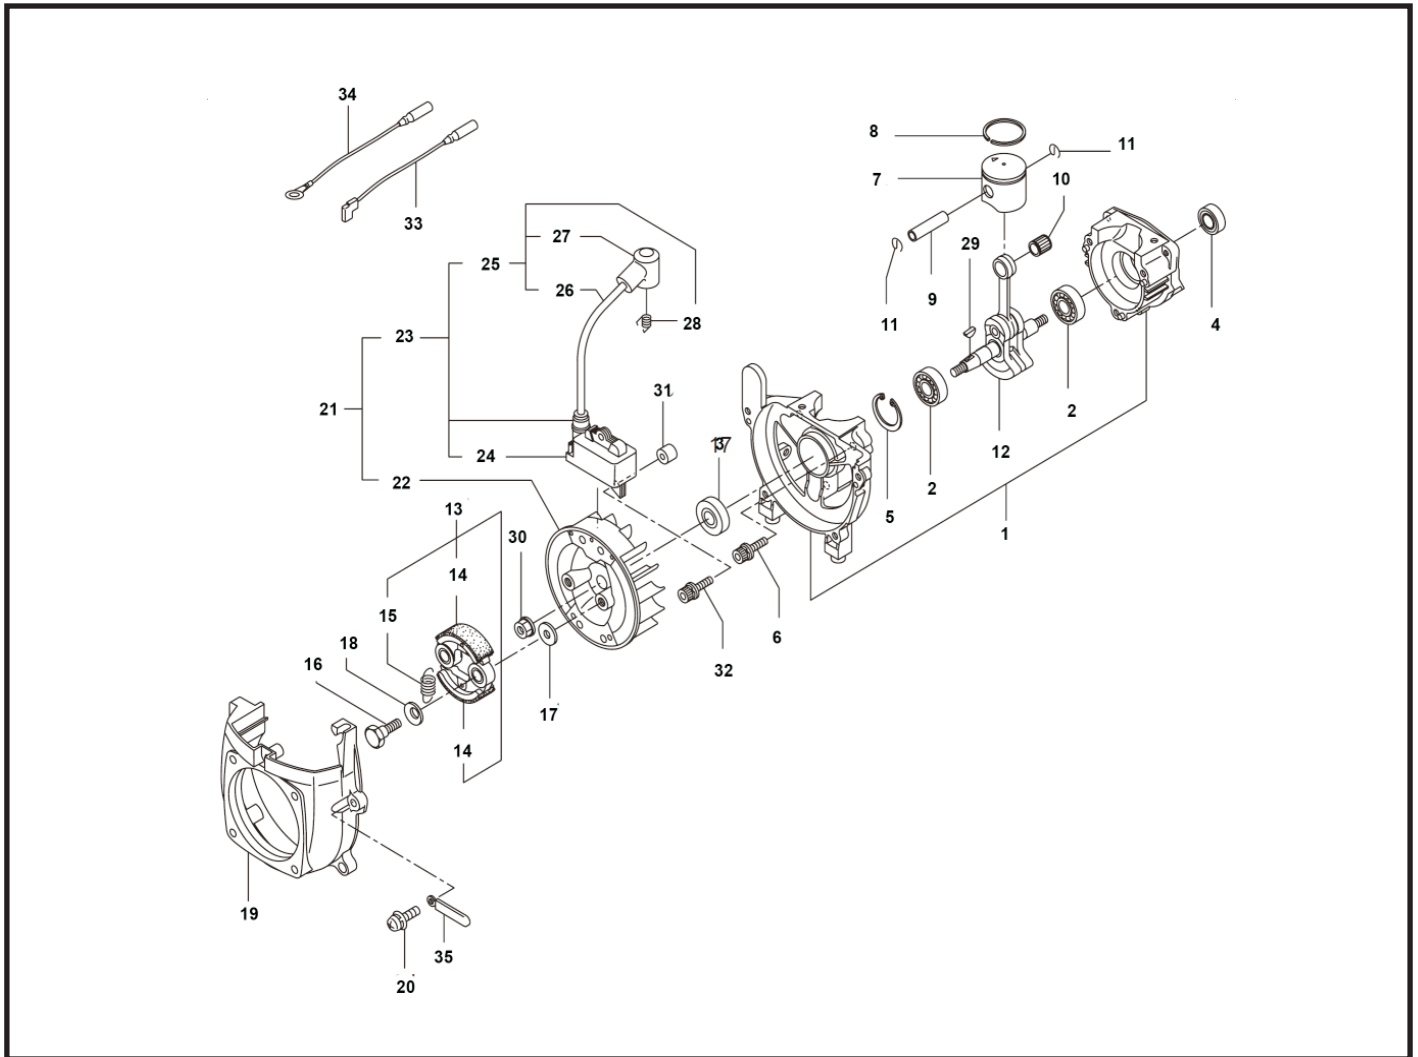


Model		MX21/MX21H			MX24/MX24X		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Crankcase	280341	1			←	
2	Bearing	280488	2	PPL 6001		←	
3	Oil Seal	261492	1	ISCD12287		←	
4	Oil Seal	261386	1	ISCD12227		←	
5	Snap Ring	055185	1	#28		←	
6	Cap Screw	261612	3	M5x30		←	
7	Piston	261032	1		283265	1	
8	Piston Ring	261158	1		263789	1	
9	Piston Pin	261036	1		281185	1	
10	Bearing, Needle	288520	1		261037	1	KBK8x11x11.8x1
11	Clip,Piston	261576	2			←	
12	Crankshaft/Conn.Rod Ass'y	283879	1		267193	1	
13	Clutch Ass'y	269168	1	Incl.14,15		←	
14	Clutch Shoe	269169	2			←	
15	Spring, Clutch	269173	1			←	
16	Clutch Bolt	269647	2			←	
17	Washer	269175	2	6.1x15x1.6		←	

PISTON, CRANKCASE, CLUTCH, ROTOR-1 (MX21/MX21H/MX24/MX24H)

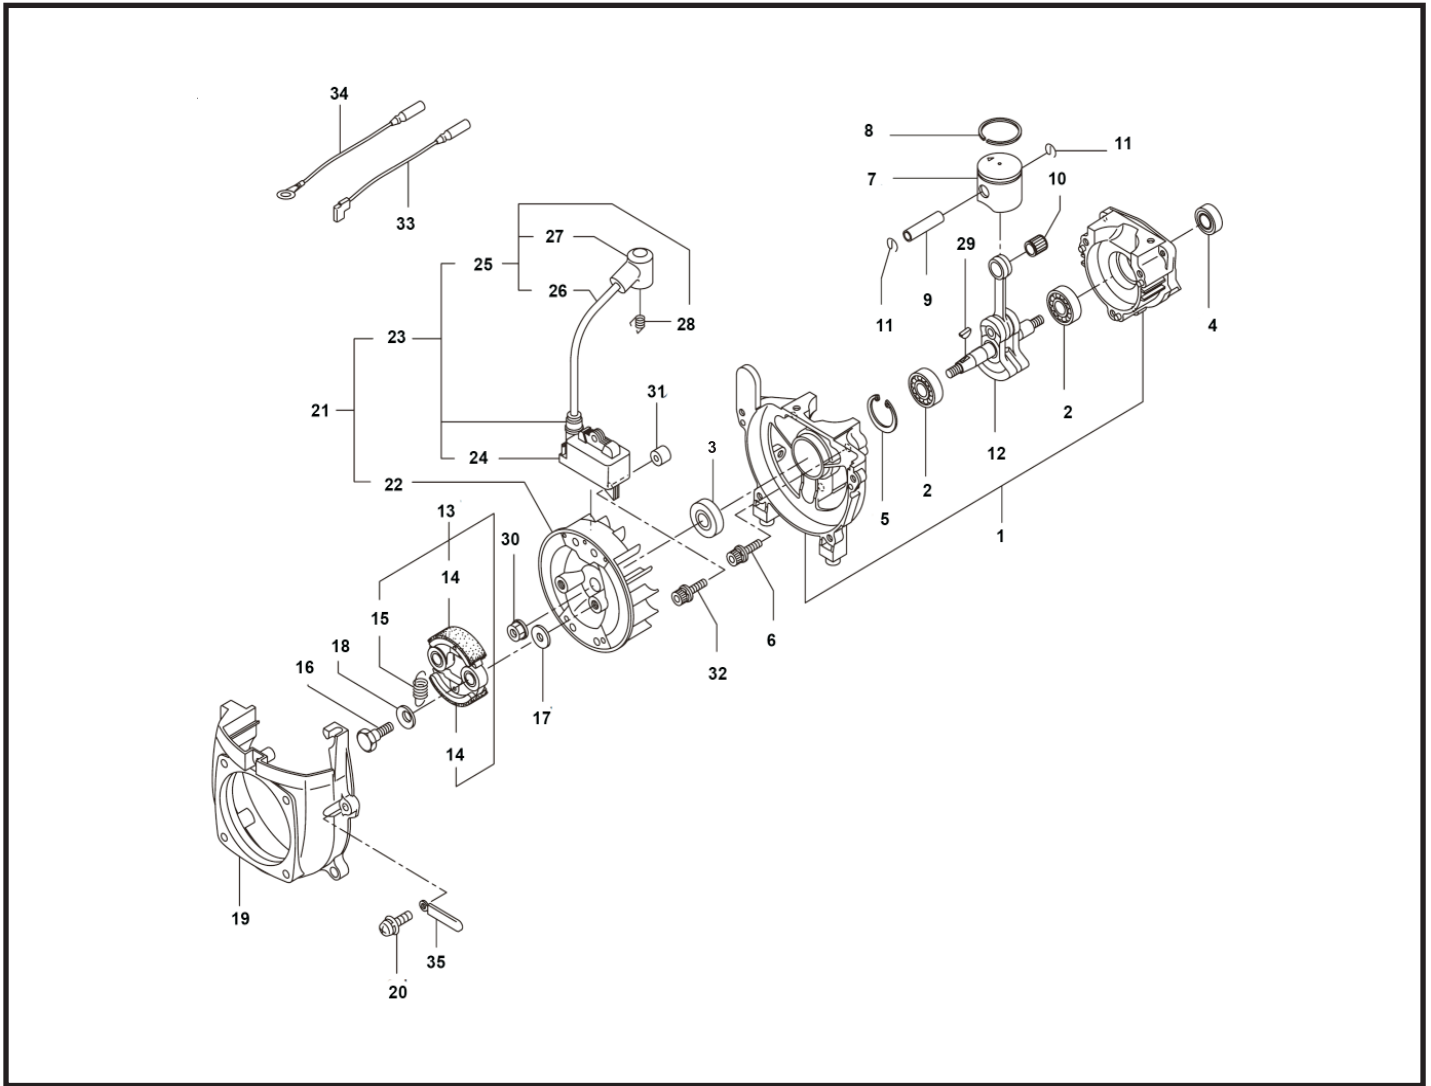


Model		MX21/MX21H			MX24/MX24H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
18	Wave Washer	261777	2				←
19	Fan Cover	283386	1				←
20	Screw	269831	4	M5x20			←
21	Magneto Ass'y	283567	1	Incl.22-28	280469	1	Incl.22-28
22	Rotor/Fan	283397	1		261356	1	
23	Ignition Coil Ass'y	283645	1	Incl.24-28	280470	1	Incl.24-28
24	Coil	283722	1		267401	1	
25	Spark Plug Wire Ass'y	283646	1	Incl.26-28	280868	1	Incl.26-28
26	Spark Plug Wire	283647	1		280869	1	
27	Plug Boot	283178	1		280870	1	
28	Connector	283270	1		280871	1	
29	Woodruff Key	261076	1	3x10			←
30	Nut,Rotor	261417	1	M8			←
31	Spacer	280381	2				←
32	Cap Screw	261256	2	M4x25			←
33	Lead	269722	1		267492	1	130L
34	Wire, Lead	282880	1				←
35	Clamp	264588	1				←

PISTON, CRANKCASE, CLUTCH, ROTOR-2 (MX27/MX27H)

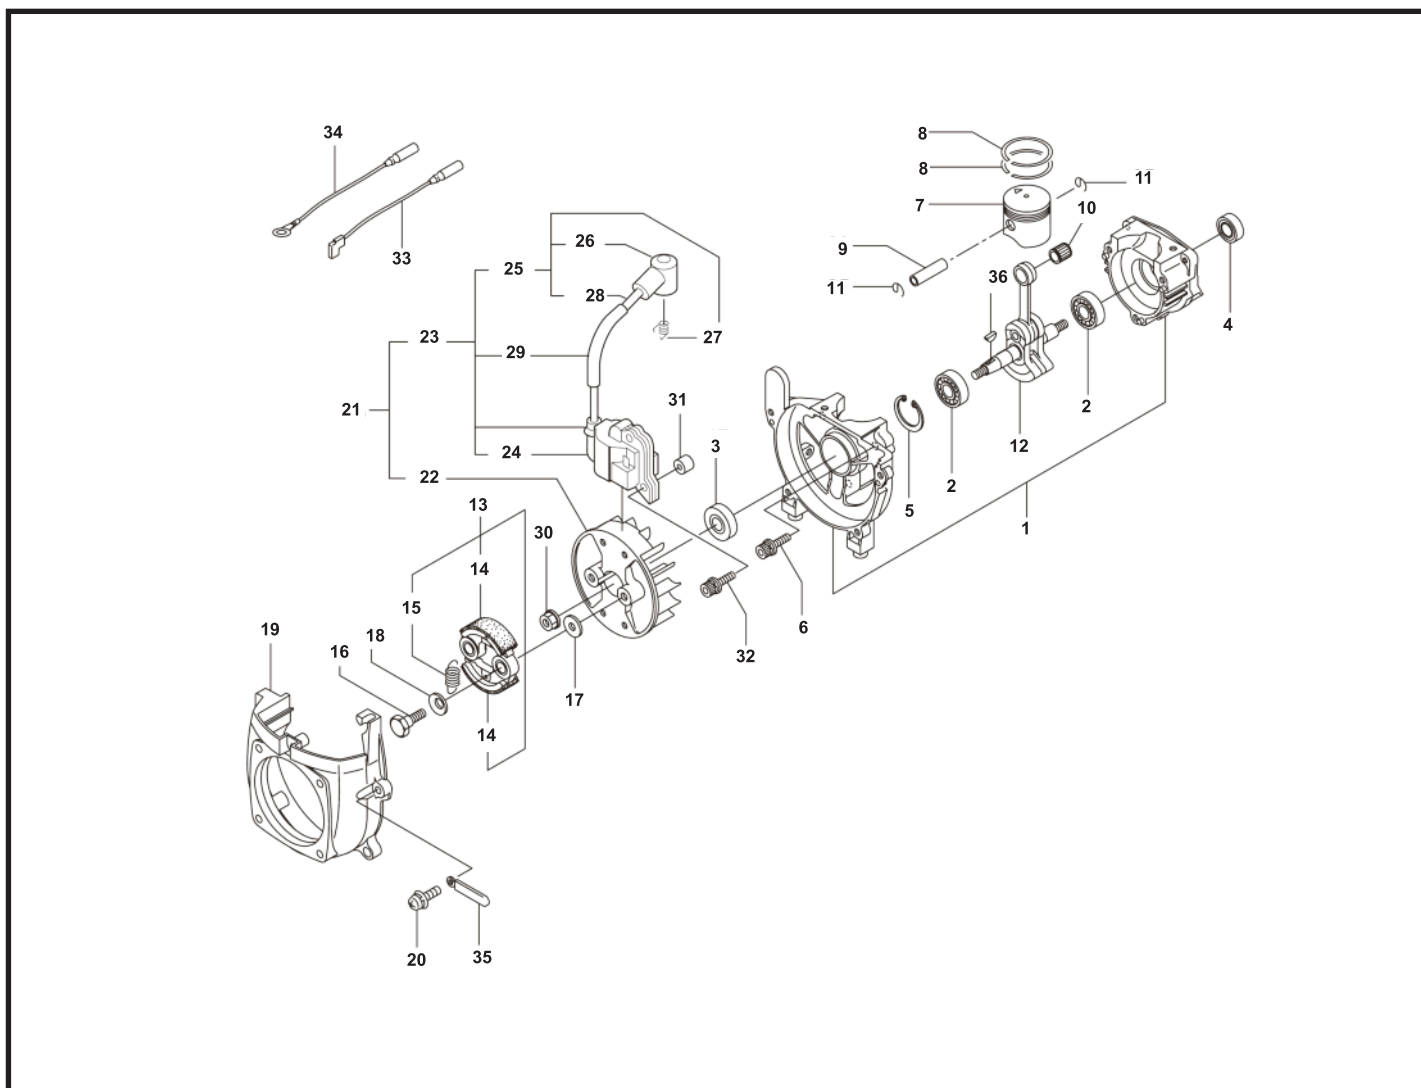


Model		MX27			MX27H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Crankcase	282245	1			←	
2	Bearing	280488	2	PPL.6001		←	
3	Oil Seal	261492	1	ISCD12287		←	
4	Oil Seal	261386	1	ISCD12227		←	
5	Snap Ring	055185	1	#28		←	
6	Cap Screw	261612	3	M5x30		←	
7	Piston	269160	1			←	
8	Piston Ring	261496	2			←	
9	Piston Pin	261497	1			←	
10	Bearing, Needle	261037	1	KBK8x11x11.8x1		←	
11	Clip, Piston	261576	2			←	
12	Crankshaft/Conn.Rod Ass'y	282323	1			←	
13	Clutch Ass'y	269168	1	Incl.14,15		←	
14	Clutch Shoe	269169	2			←	
15	Spring, Clutch	269173	1			←	
16	Clutch Bolt	269647	2			←	
17	Washer	269175	2	6.1x15x1.6		←	

PISTON, CRANKCASE, CLUTCH, ROTOR-2 (MX27/MX27H)

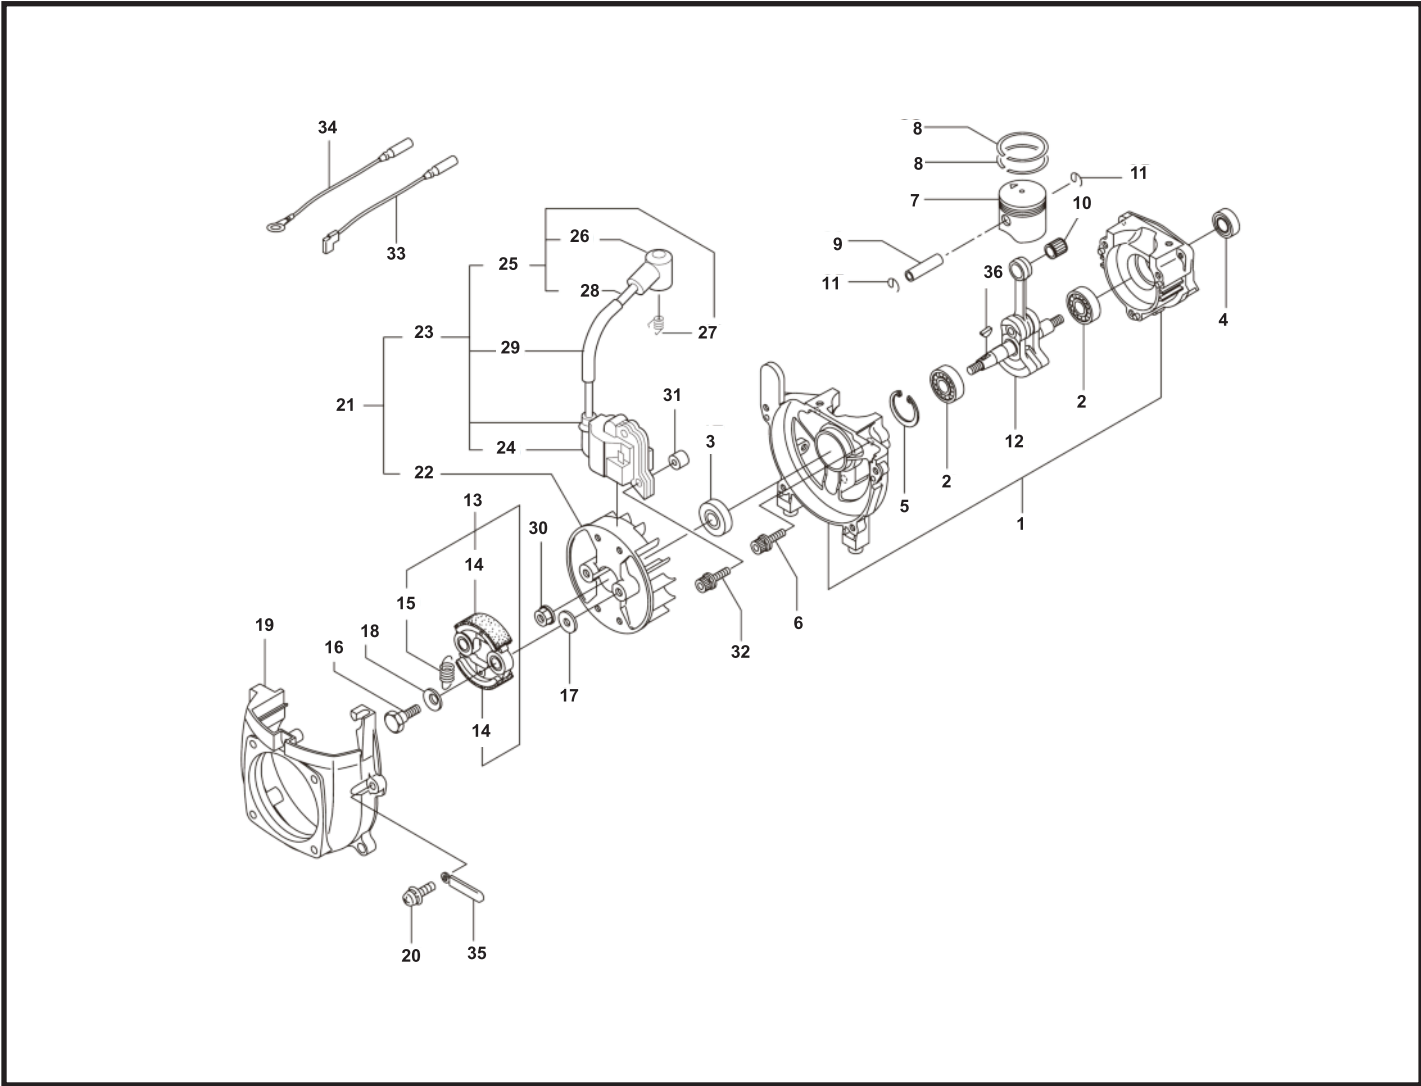


Model		MX27			MX27H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
18	Wave Washer	261777	2			←	
19	Fan Cover	283386	1	Incl.20-21,23-29		←	
20	Screw	269831	4	M5x20		←	
21	Magneto Ass'y	285324	1	incl.23-29		←	
22	Rotor/Fan	261356	1			←	
23	Ignition Coil Ass'y	285325	1			←	
24	Coil	267401	1	Incl.25-27		←	
25	Spark Prug Wire Ass'y	285326	1			←	
26	Plug Boot	261074	1			←	
27	Connector	261075	1			←	
28	Spark Prug Wire	285327	1			←	
29	Insulator	285328	1			←	
30	Nut,Rotor	261417	1	M8		←	
31	Spacer	280381	2			←	
32	Cap Screw	261256	2	M4x25		←	
33	Lead	267492	1	130L		←	
34	Wire, Lead	282880	1			←	
35	Clamp	264588	1			←	
36	Woodruff Key	261076	1	3x10		←	

PISTON, CRANKCASE, CLUTCH, ROTOR-3 (MX33/MX33H)

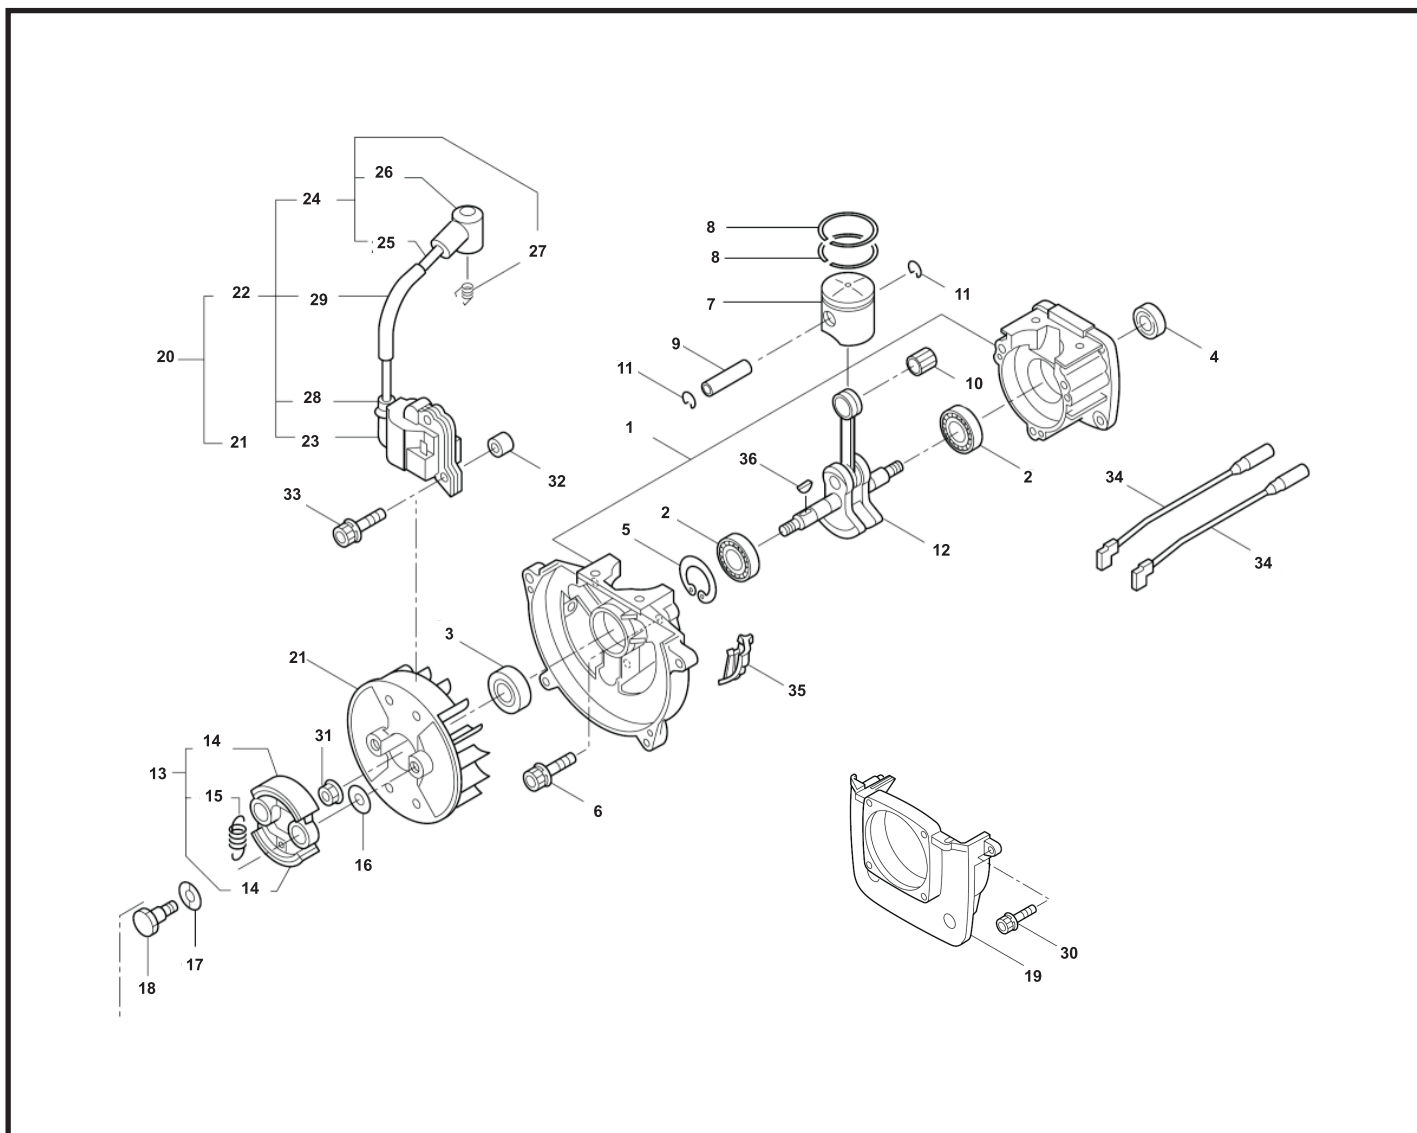

Model		MX33			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Crankcase	261379	1			←	
2	Bearing	261384	2	#6201C3		←	
3	Oil Seal	261385	1	ISCD12327		←	
4	Oil Seal	261386	1	ISCD12227		←	
5	Snap Ring	016732	1	#32		←	
6	Cap Screw	261612	3	M5x30		←	
7	Piston	266980	1			←	
8	Piston Ring	261390	2			←	
9	Piston Pin	261555	1	7x10x31.5L		←	
10	Bearing, Needle	261392	1	KBK10x14x12.5x1		←	
11	Clip, Piston Pin	261393	2			←	
12	Crankshaft/Conn.Rod Ass'y	261395	1			←	
13	Clutch Ass'y	264503	1	Incl.14,15		←	
14	Clutch Shoe	264504	2			←	
15	Spring, Clutch	263614	1			←	
16	Washer	261189	2	6x16.5x1.2		←	
17	Wave Washer	261777	2			←	


PISTON, CRANKCASE, CLUTCH, ROTOR-3 (MX33/MX33H)

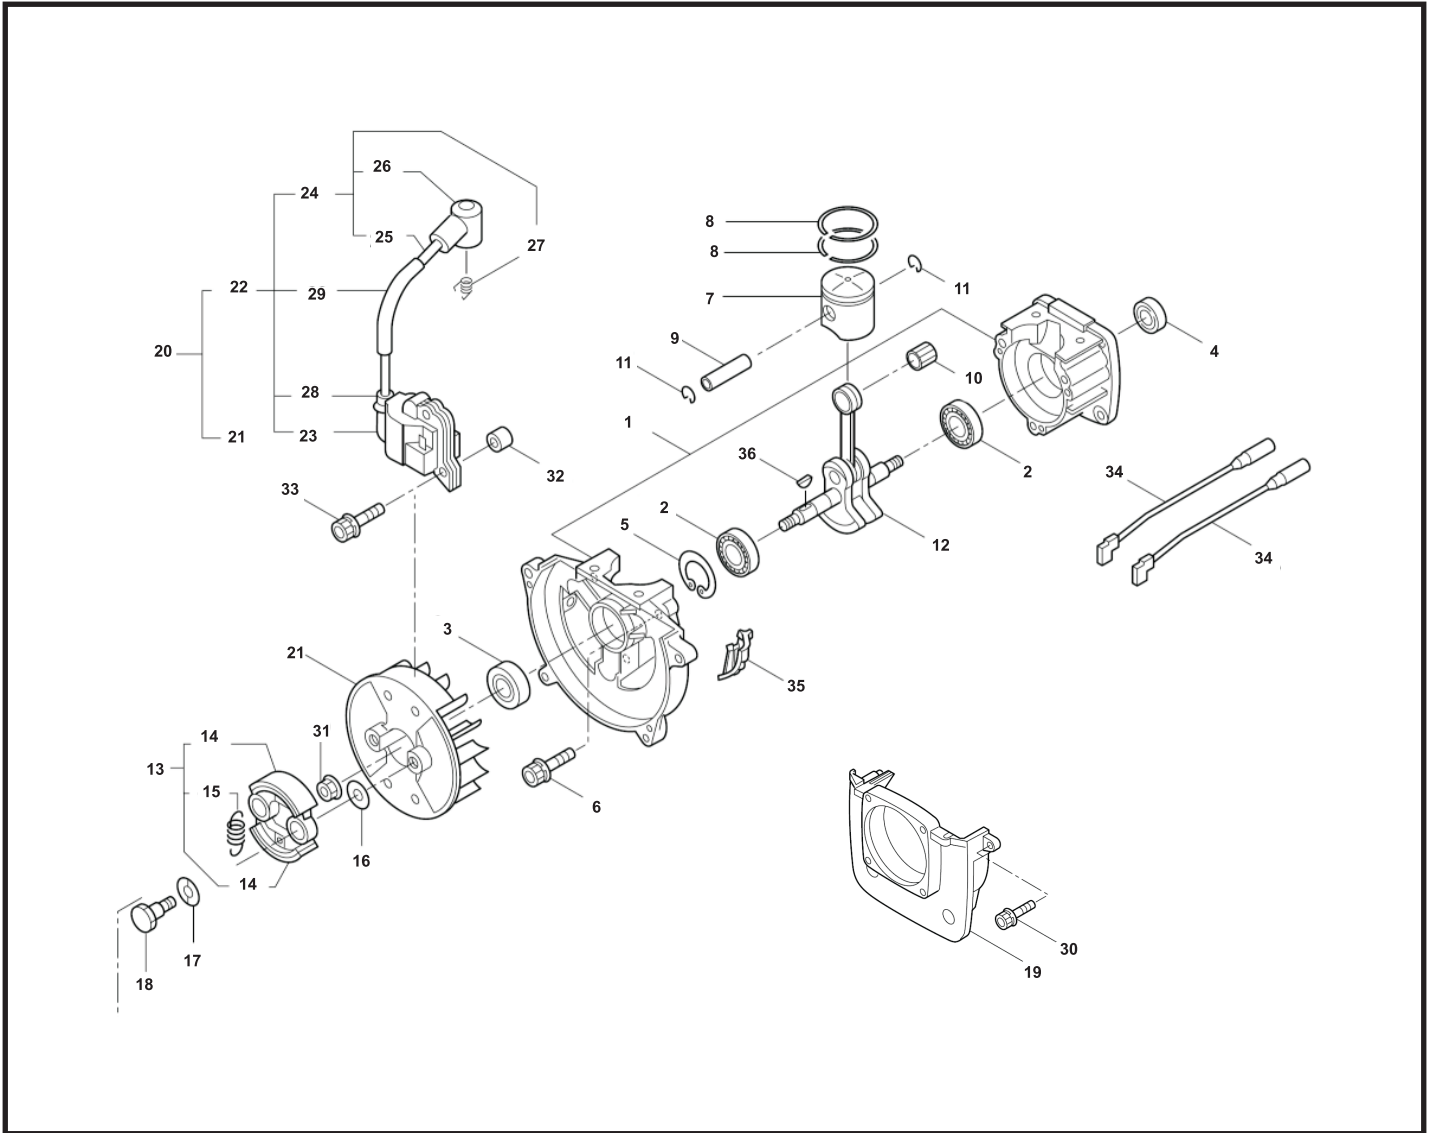

Model		MX33			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
18	Bolt	264505	2				←
19	Fan Cover	281325	1	Incl.20-21,23-29			←
20	Magneto Ass'y	267391	1				←
21	Rotor/Fan	261356	1	Incl.23-29			←
22	Ignition Coil Ass'y	267400	1				←
23	Coil	267401	1				←
24	Spark Plug Wire Ass'y	267403	1	Incl.25-27			←
25	Spark Plug Wire	267404	1				←
26	Plug Boot	261074	1				←
27	Connector	261075	1				←
28	Cap	261072	1				←
29	Insulator	269418	1				←
30	Cap Screw	261250	4	M5x20			←
31	Nut,Rotor	261417	1	M8			←
32	Spacer	280381	2				←
33	Cap Screw	261256	2	M4x25			←
34	Lead	267492	2	130L			←
35	Screen	265458	1				←
36	Woodruff Key	261076	1	3x10			←


RECOIL STARTER-1

(MX21/MX21H/MX24/MX24H/MX27/MX27H)

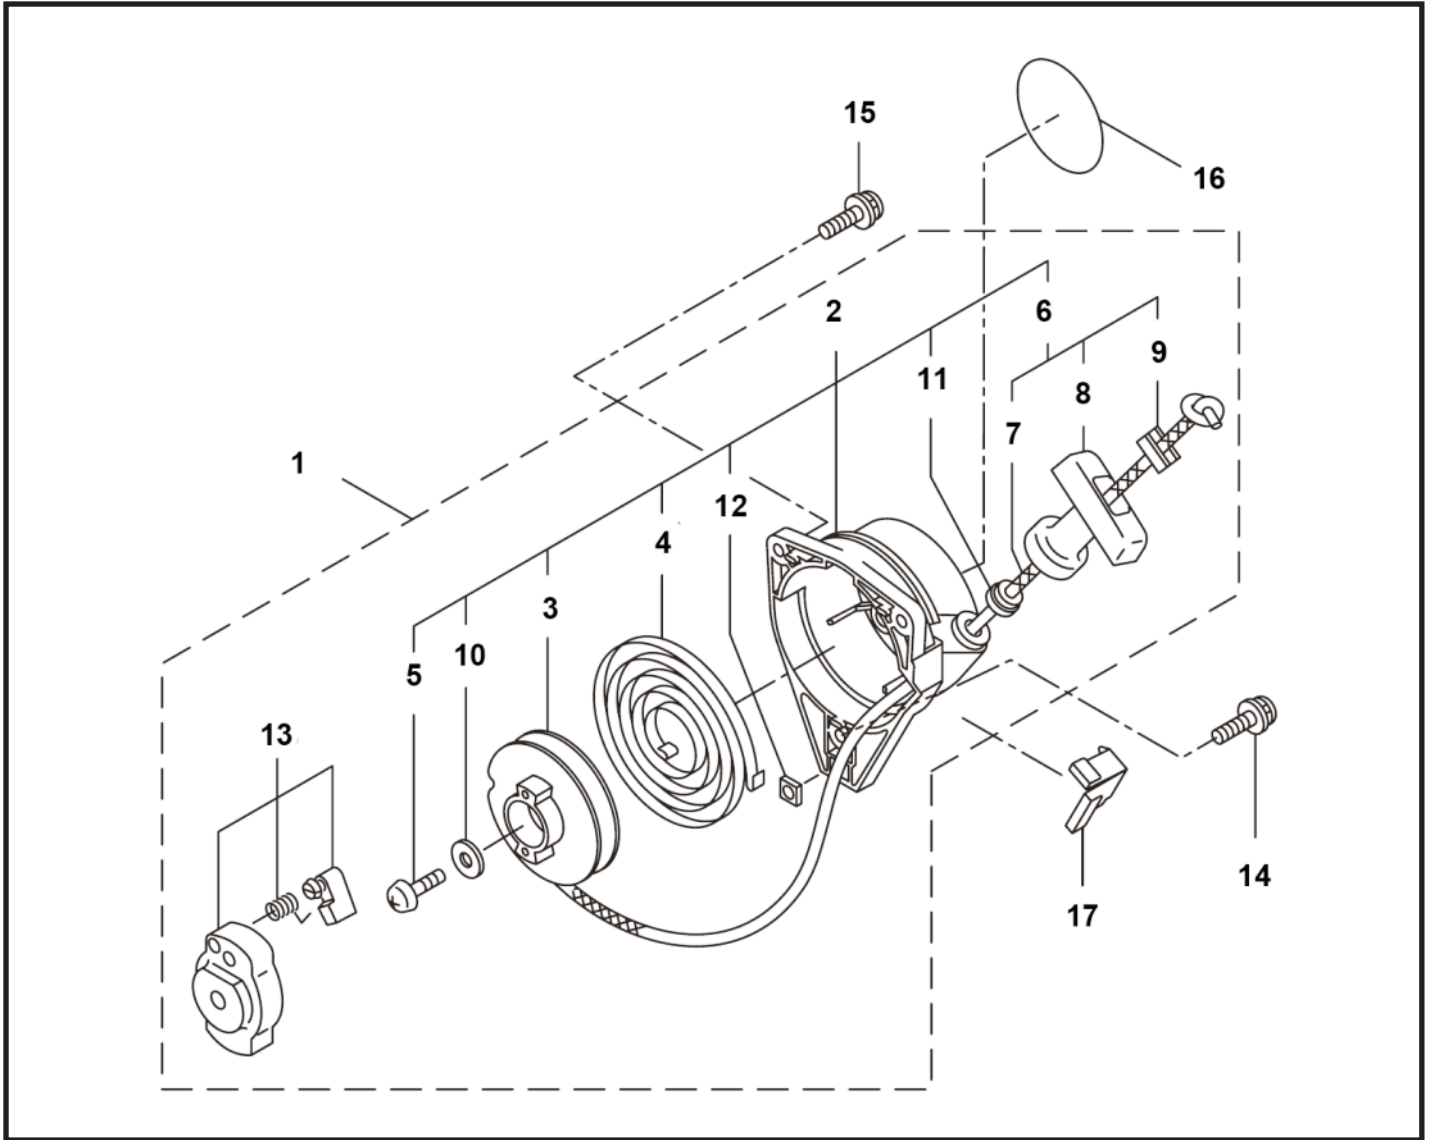

Model		MX21/MX21H			MX24/MX24X			MX27/MX27H		
Ref	Parts number	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Recoil Starter Ass'y	280419	1	Incl.2-13		←			←	
2	Recoil Ass'y	269999	1	Incl.3-12		←			←	
3	Reel	280492	1			←			←	
4	Spiral Spring	287421	1			←			←	
5	Screw	280494	1			←			←	
6	Starter Rope Ass'y	280495	1	Incl.7-9		←			←	
7	Starter Rope	283616	1			←			←	
8	Starter Grip	280497	1			←			←	
9	Stopper	280550	1			←			←	
10	Washer	280547	1			←			←	
11	Collar	280548	1			←			←	
12	Nut	269423	1			←			←	
13	Stater Pulley Ass'y	287399	1			←			←	
14	Screw	269833	1	M4x16		←			←	
15	Screw	280489	2	M4x20		←			←	
16	Label	288689	1	EE200	288693	1	EE230	288697	1	EE260
17	Plate	288500	1			←			←	

RECOIL STARTER-2 (MX33/MX33H)

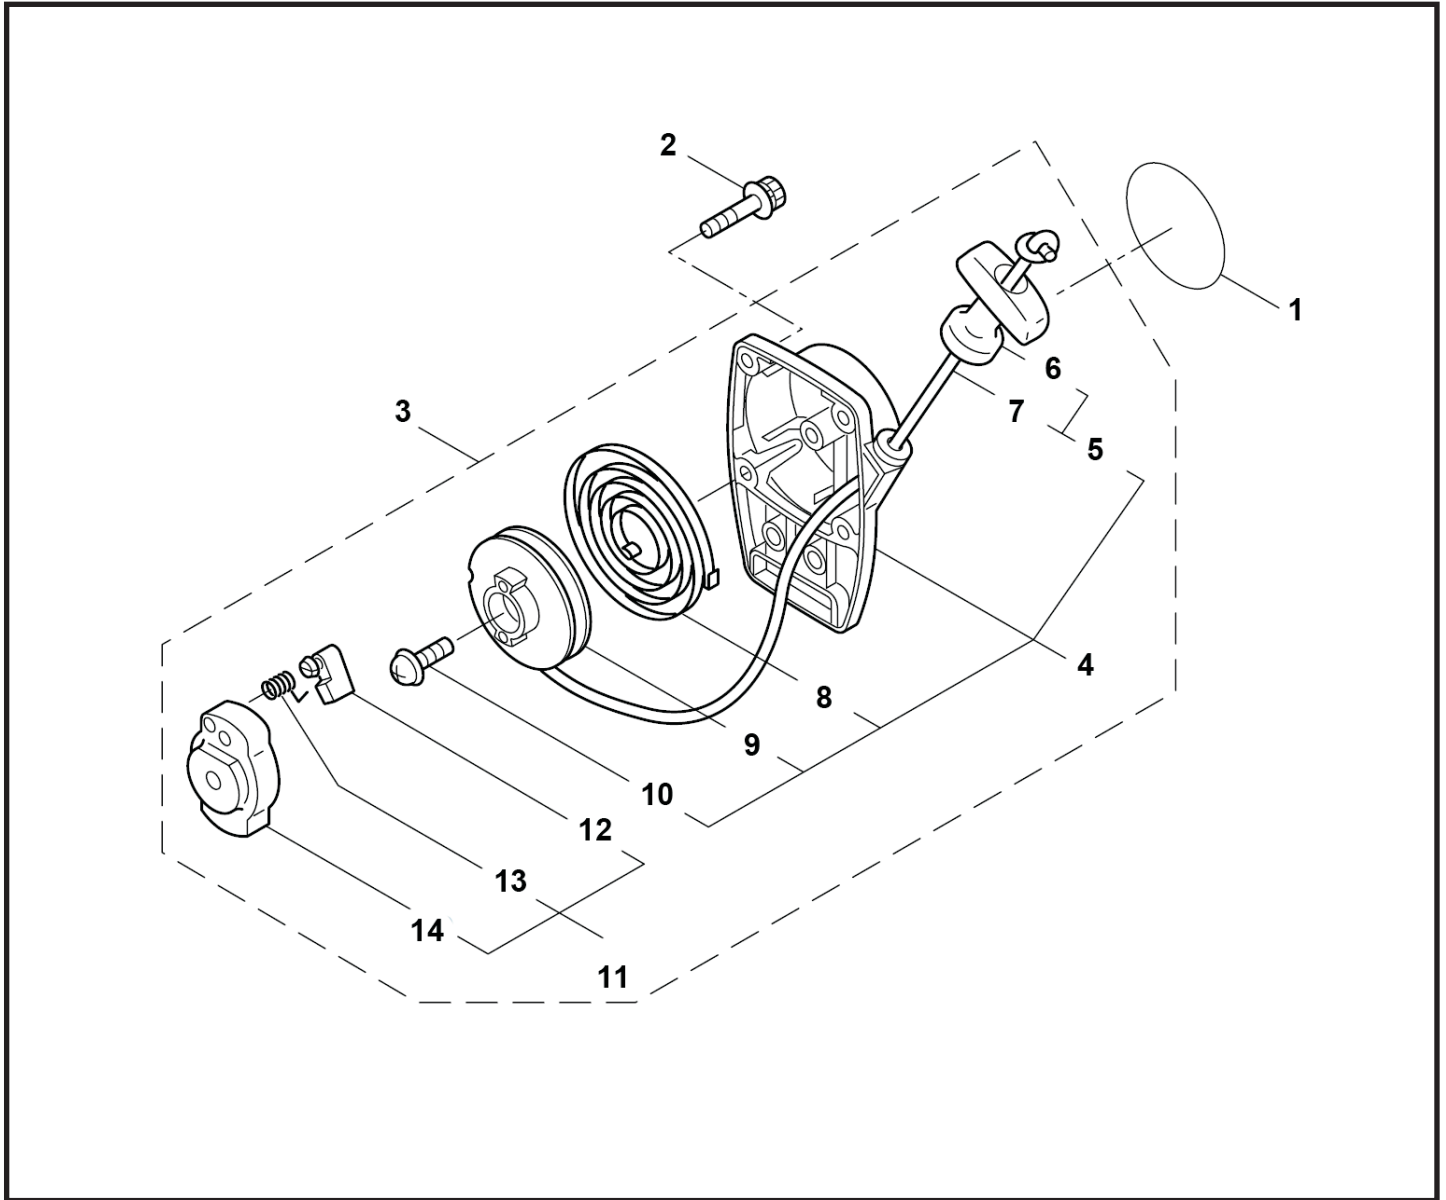


Parts Contents plus Recommendation (For every 20 units we recommend the follow quantity in spare parts)

Model		MX33			MX33H		
Ref	Parts number	P/N	QTY	RE	P/N	QTY	RE
1	Label	288701	1	AE320		←	
2	Cap Screw	261257	4	M4x16		←	
3	Recoil Starter Ass'y	261419	1	Incl.4-14		←	
4	Recoil Ass'y	261420	1	Incl.5-10		←	
5	Rope Ass'y	261723	1	Incl.6,7		←	
6	Starter Grip	261725	1			←	
7	Starter Rope	261724	1	3x890L		←	
8	Spiral Spring	261721	1			←	
9	Pulley	261720	1			←	
10	Screw	262922	1			←	
11	Starter Pawl Ass'y	263475	1	Incl.12-14		←	
12	Pawl	263477	1			←	
13	Return Spring	261728	1			←	
14	Pawl Case	263476	1			←	


CARBURETOR-1

(MX21/MX21H/MX24/MX24H)

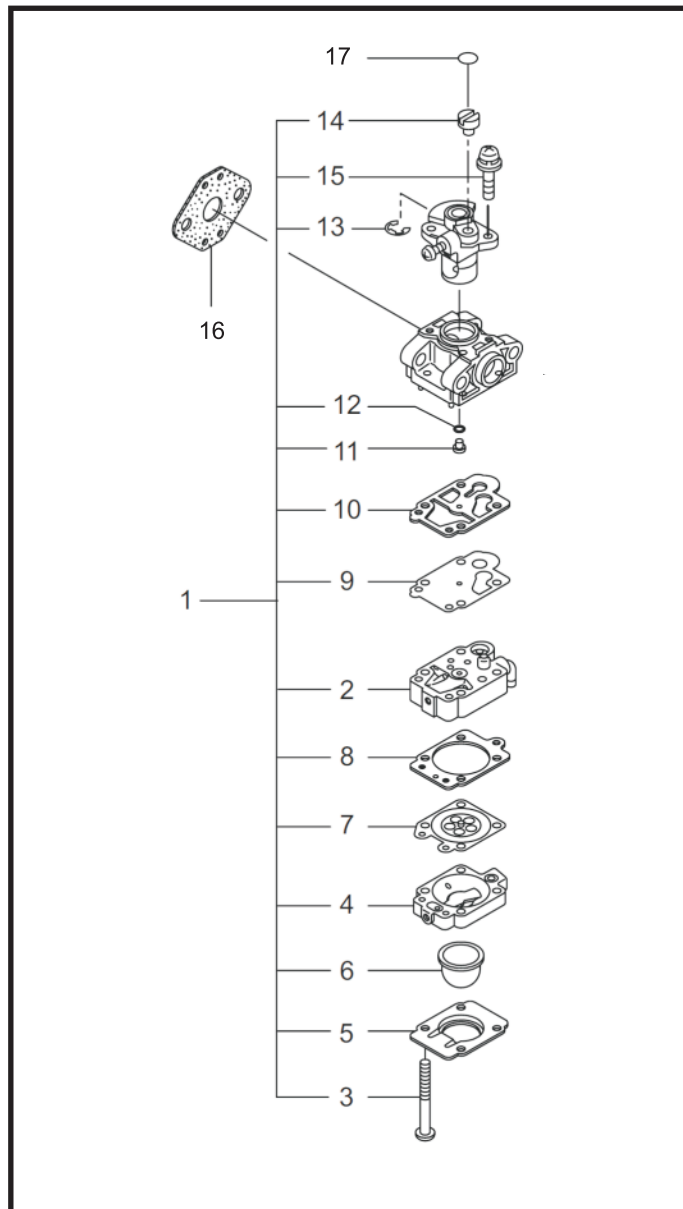


Ref	Parts name	MX21/ MX21H			MX24/MX24H		
		P/N	QTY	RE	P/N	QTY	RE
1	Carburetor Ass'y	283893	1	WYL-249, Incl.2-15			←
2	Pump Body	263739	1				←
3	Screw	262996	4				←
4	Purge Body	262991	1				←
5	Cover Plate	262992	1				←
6	Primer Bulb	261874	1				←
7	Diaphragm, Metering	283905	1				←
8	Gasket	262993	1				←
9	Diaphragm, Fuel Pump	262994	1				←
10	Gasket	282576	1				←
11	Main Jet	262730	1	#39			←
12	O-Ring	261871	1				←
13	E-Ring	261876	1				←
14	Swivel	261658	1				←
15	Screw	264682	2				←
16	Gasket	261864	1				←
17	Swivel Ring	280020	1				←

CARBURETOR-2 (MX27/MX27H)

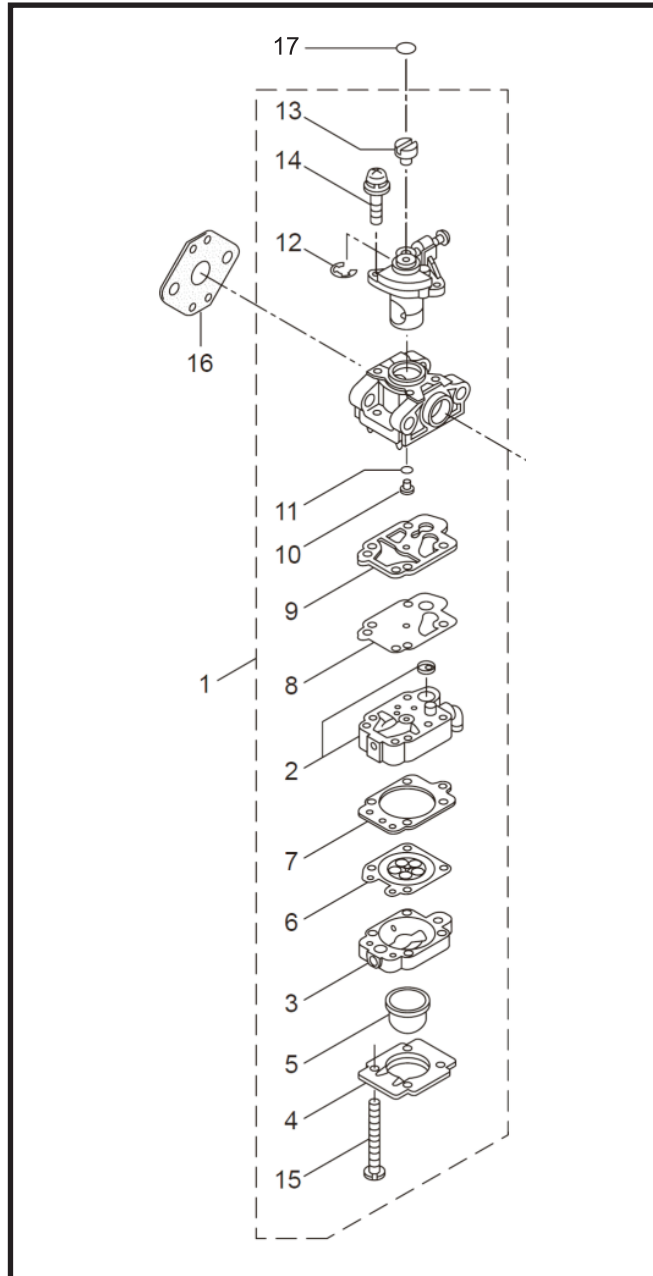

Model		MX27/MX27H		
Ref	Parts name	P/N	QTY	RE
1	Carburetor Ass'y	286274	1	WYL-285, Incl. 2-15
2	Pump Body	263739	1	
3	Purge Body	262991	1	
4	Cover Plate	262992	1	
5	Primer Bulb	261874	1	
6	Diaphragm, Meterring	283905	1	
7	Gasket	262993	1	
8	Diaphragm, Fuel Pump	262994	1	
9	Gasket	282576	1	
10	Main Jet	267358	1	
11	O-Ring	261871	1	
12	E-Ring	261876	1	
13	Swivel	261658	1	
14	Screw	264682	2	
15	Screw	262996	4	
16	Gasket	261864	1	
17	Swivel Ring	280020	1	


CARBURETOR-3 (MX33/MX33H)

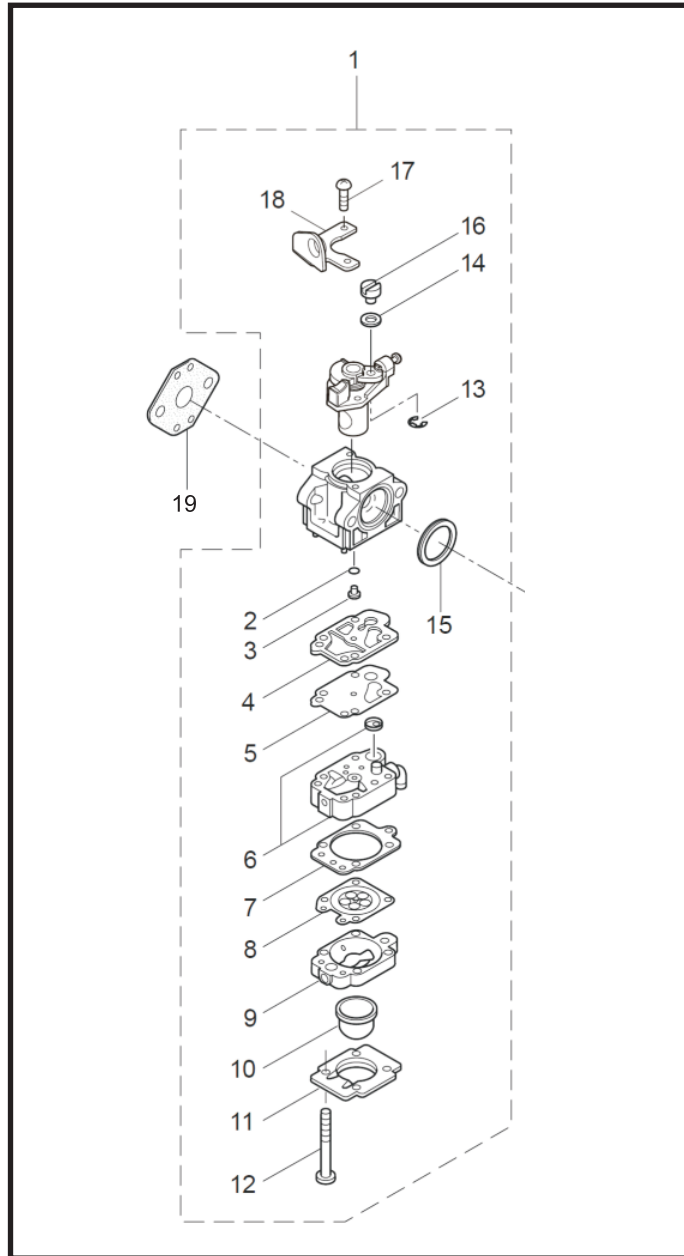

Model		MX33/MX33H		
Ref	Parts name	P/N	QTY	RE
1	Carburetor Ass'y	284085	1	WYJ-455, Incl.2-18
2	O-Ring	261871	1	
3	Main Jet	266175	1	#40.5
4	Gasket	262995	1	
5	Diaphragm,Fuel Pump	262994	1	
6	Pump Body	263739	1	
7	Gasket	262993	1	
8	Diaphragm,Metering	261873	1	
9	Purge Body	262991	1	
10	Primer Bulb	261874	1	
11	Cover Plate	262992	1	
12	Screw	262996	4	
13	E-Ring	261876	1	
14	Washer	264678	1	
15	Packing	261657	1	
16	Swivel	261658	1	
17	Screw	261875	2	
18	Bracket	264677	1	
19	Gasket	261864	1	

CLEANER-1


(MX21/MX21H/MX24/MX24H/MX27/MX27H)

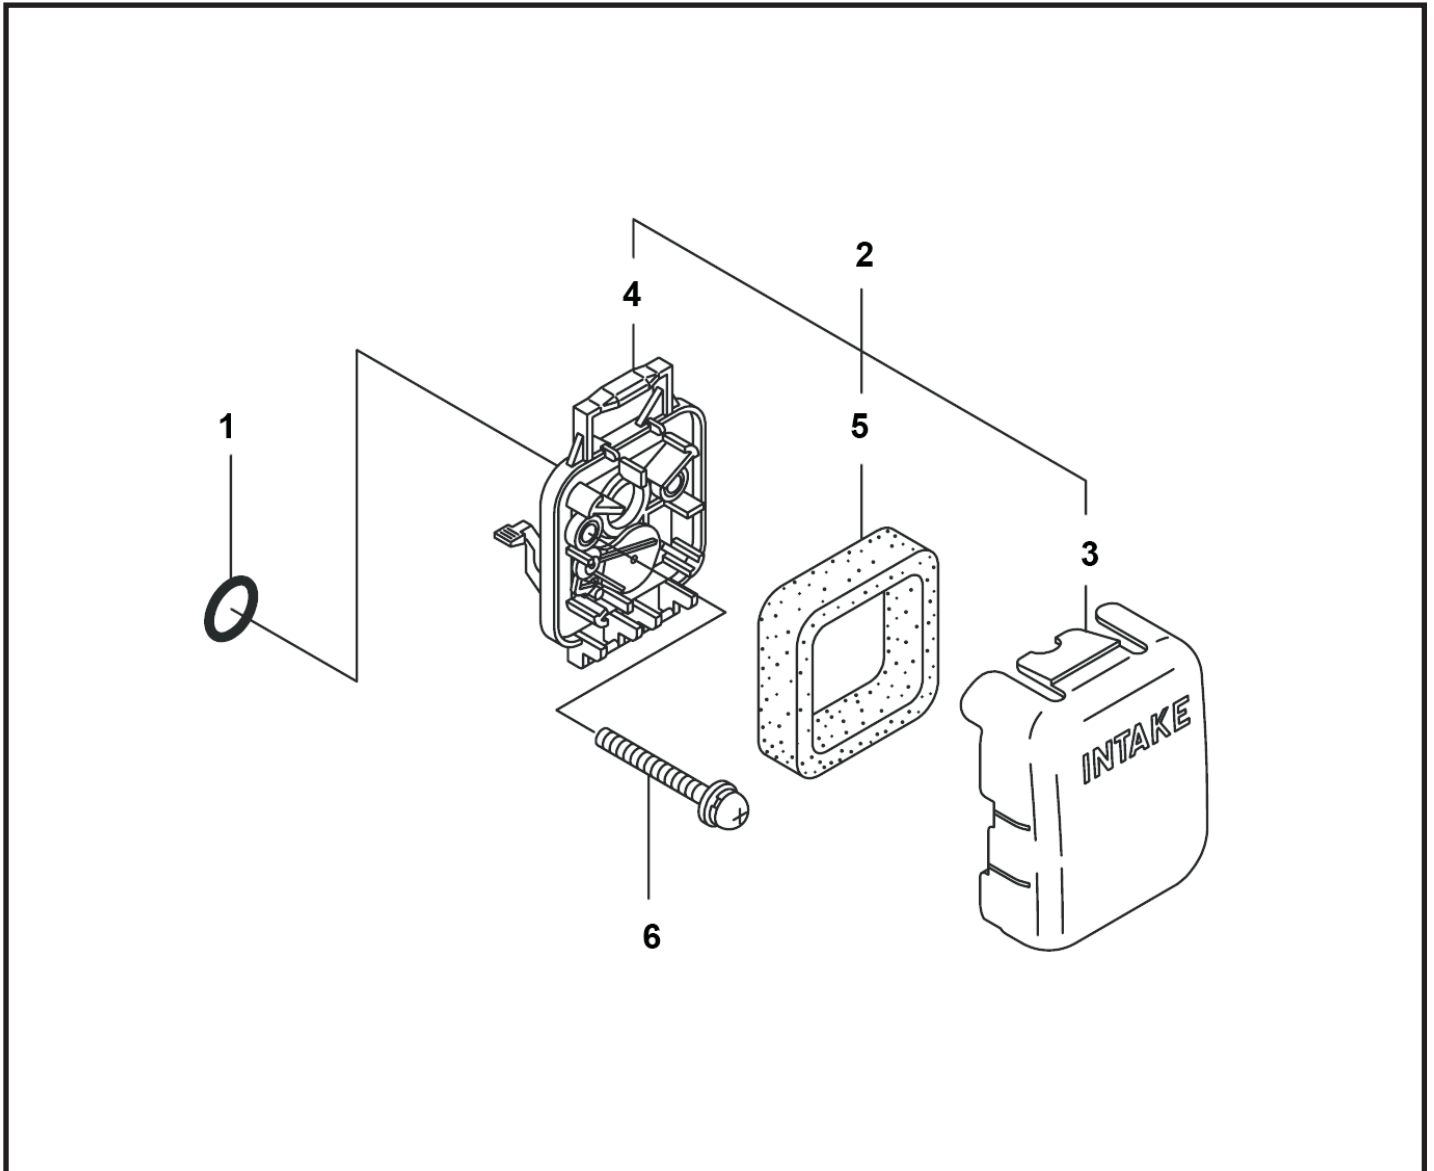

Model		MX21/MX21H			MX24/MX24H			MX27/MX27H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	O-Ring	264691	1			←			←	
2	Cleaner Ass'y	266420	1	Incl.3-5		←			←	
3	Cover	264709	1			←			←	
4	Housing	266433	1			←			←	
5	Filter	264695	1			←			←	
6	Screw	269834	2			←			←	

CLEANER-2


(MX33/MX33H)

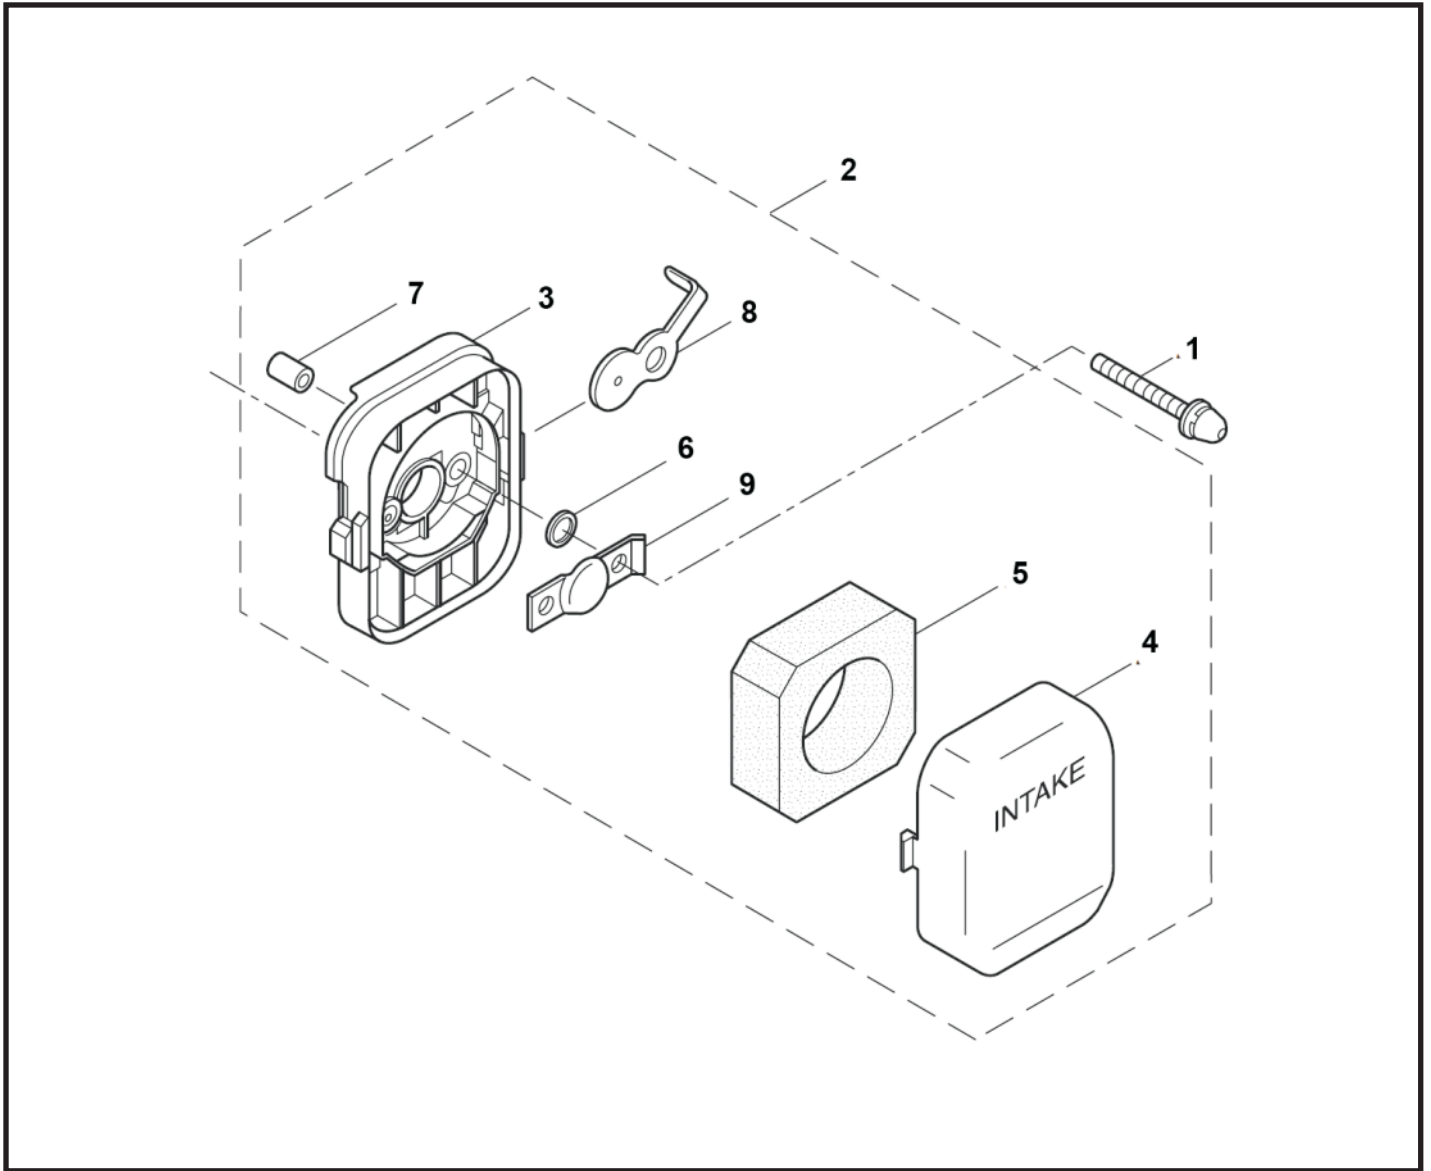

Ref	Parts name	Model			MX33			MX33H		
		P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Cap Screw	264016	2	M5x60						
2	Air Filter Ass'y	262902	1	Incl.3-9						
3	Housing	263005	1							
4	Cover	262998	1							
5	Element	263006	1							
6	Washer	263000	1							
7	Sleeve	263001	2							
8	Choke Valve	263007	1							
9	Plate	263003	1							


FUEL TANK-1

(MX21/MX21H/MX24/MX24H)

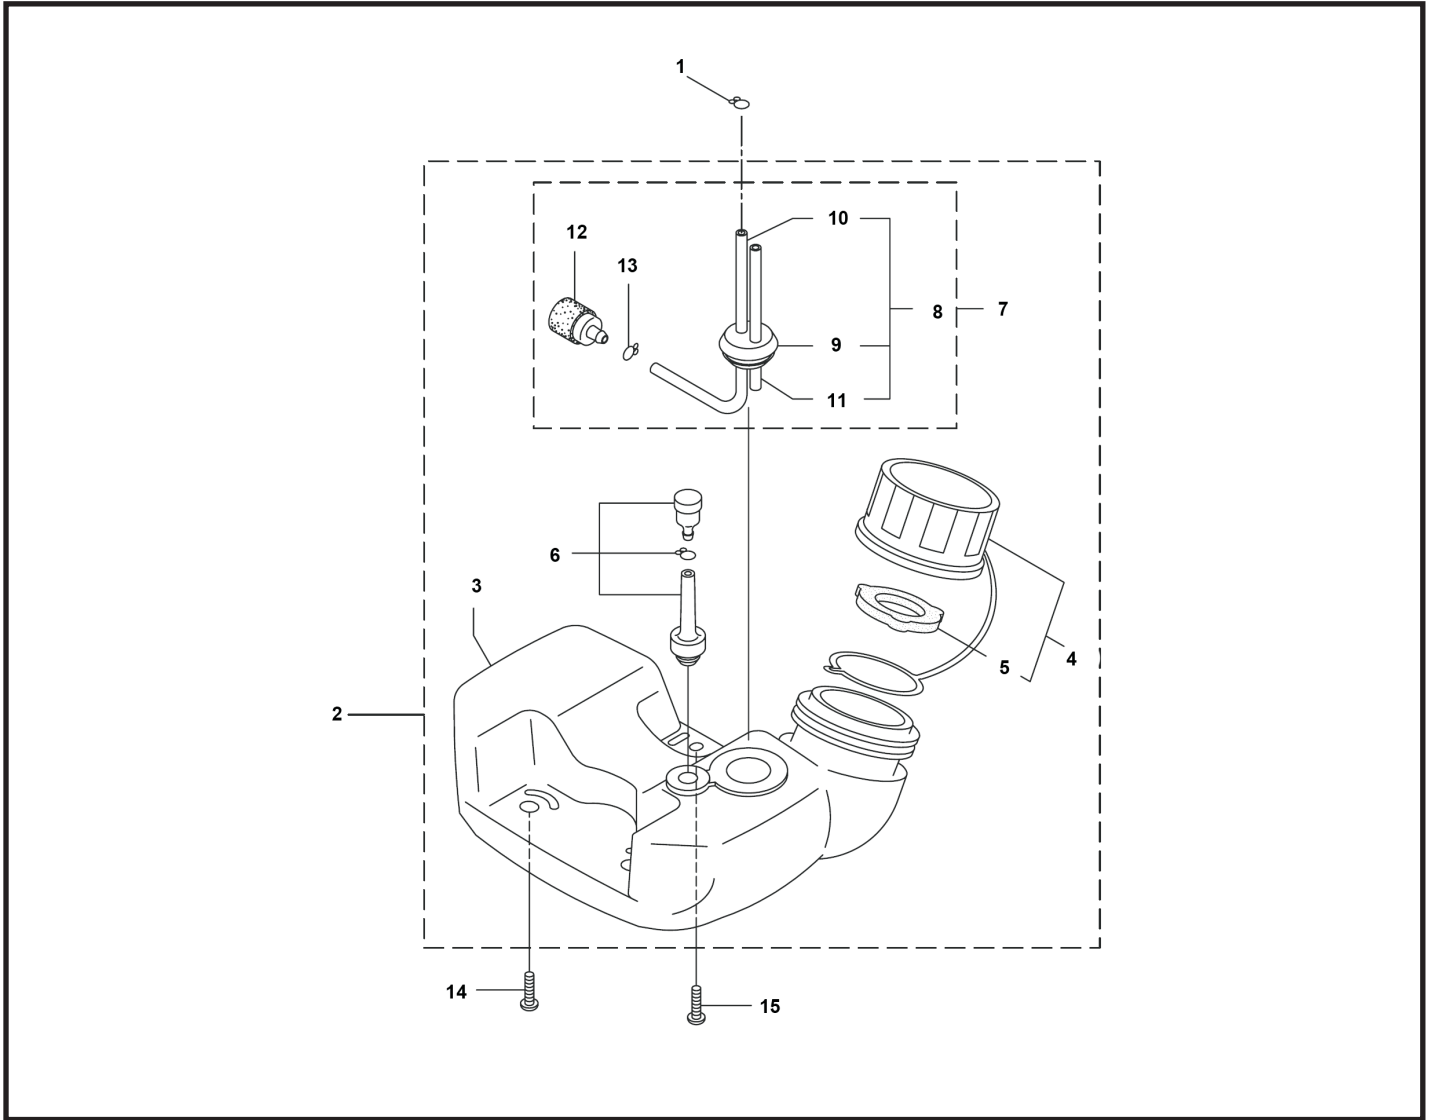


Model		MX21/MX21H			MX24/MX24H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Clip	261117	1				←
2	Fuel Tank Ass'y	285728	1	Incl.3-13			←
3	Fuel Tank	285664	1				←
4	Fuel Tank Cap Ass'y	281564	1	Incl.5			←
5	Gasket	269377	1				←
6	Breather Ass'y	261696	1				←
7	Fuel Pipe Pick-up Ass'y	265752	1	Incl.8-13			←
8	Fuel Pipe Ass'y	264031	1	Incl.9-11			←
9	Grommet	261115	1				←
10	Fuel Pipe	261690	1	160L			←
11	Return Pipe	263038	1	3x6x85L			←
12	Filter Ass'y	264653	1				←
13	Clip	261117	1				←
14	Screw	269828	2	M5x16			←
15	Screw	281208	1	M5x16			←

FUEL TANK-2 (MX27/MX27H)

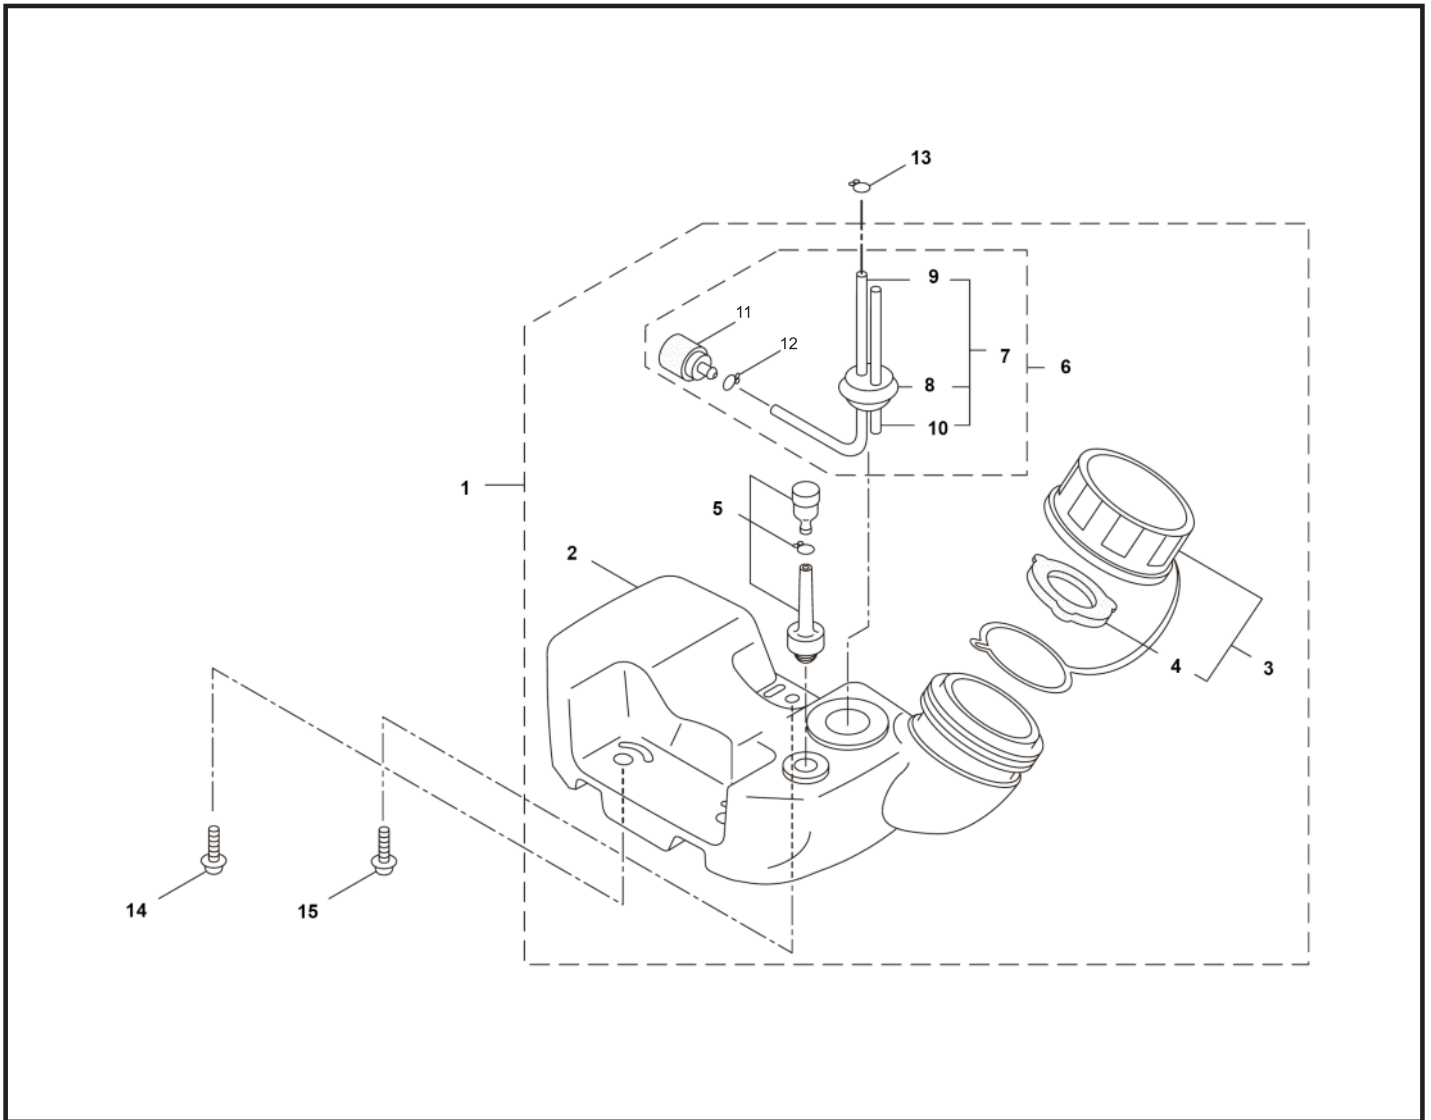

Model		MX27			MX27H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Fuel Tank Ass'y	284023	1	Incl.2-12			←
2	Fuel Tank	282250	1				←
3	Fuel Tank Cap Ass'y	281564	1	Incl.4			←
4	Gasket	269377	1				←
5	Breather Ass'y	261696	1				←
6	Fuel Pipe Pick-up Ass'y	265752	1	Incl.7-12			←
7	Fuel Pipe Ass'y	264031	1	Incl.8-10			←
8	Grommet	261115	1				←
9	Fuel Pipe	261690	1	160L			←
10	Return Pipe	263038	1	3x6x85L			←
11	Filter Ass'y	264653	1				←
12	Clip	261117	1				←
13	Clip	261117	1				←
14	Screw	269828	2	M5x16			←
15	Screw	281208	1	M5x16			←



FUEL TANK-3 (MX33/MX33H)

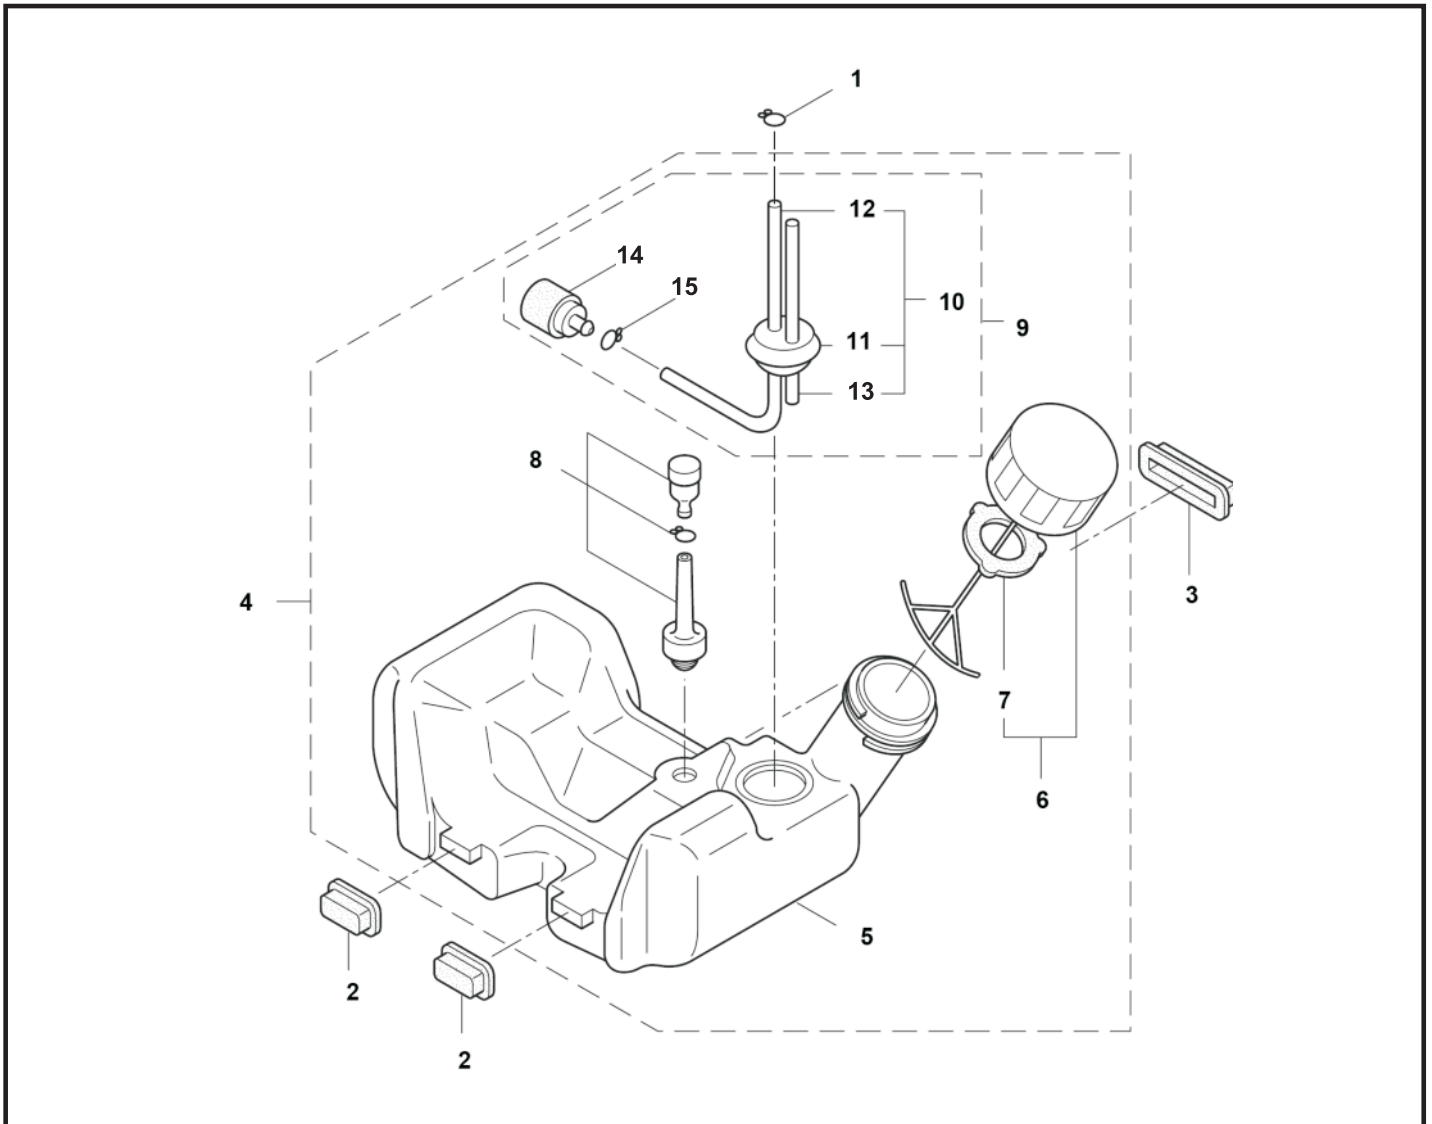

Model		MX33			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE
1	Clip	261117	1				←
2	Pad	261118	2				←
3	Pad	261119	1				←
4	Fuel Tank Ass'y	268141	1	Incl.5-10			←
5	Fuel Tank	261965	1				←
6	Fuel Tank Cap Ass'y	262726	1	Incl. 7			←
7	Gasket	261105	1				←
8	Breather Ass'y	261696	1				←
9	Fuel Pipe Pick-up Ass'y	265752	1	Incl.10-14			←
10	Fuel Pipe Ass'y	264031	1	Incl.11-14			←
11	Grommet	261115	1				←
12	Fuel Pipe	261690	1	160L			←
13	Return Pipe	263038	1	3x6x85L			←
14	Filter Ass'y	264653	1				←
15	Clip	261117	1				←

ACCESSORIES-1



(MX21/MX21H/MX24/MX24H)

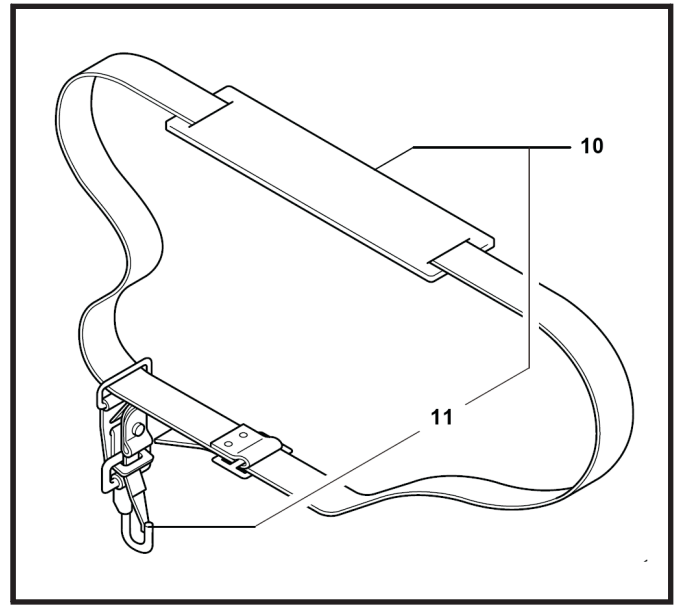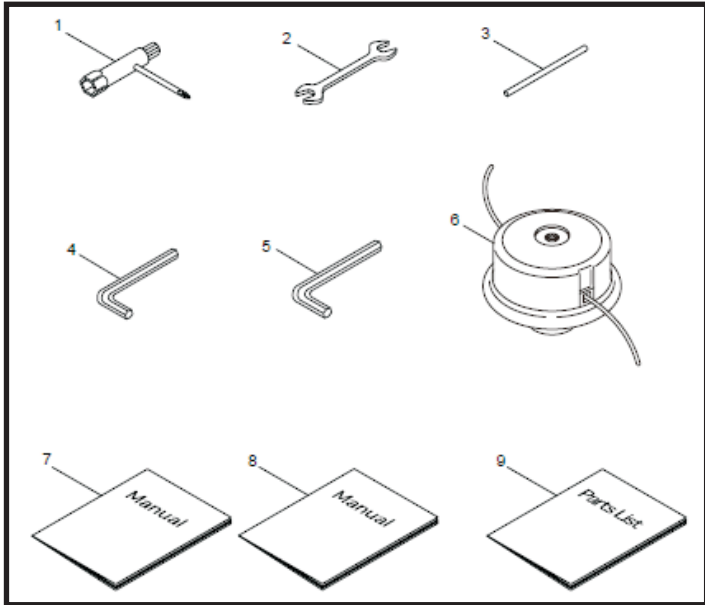

Model		MX21			MX21H			MX24			MX24H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Box Spanner	210418	1	13x19x(+)		←			←			←	
2	Double-ended Wrench	022865	1	8x10		←			←			←	
3	Lever Handle	210181	1	3.5x170L		←			←			←	
4	Wrench	219432	1	4mm		←			←			←	
5	Wrench	219433	1	5mm		←			←			←	
6	Semi-Auto Head (L)	232225	1			←			←			←	
7	Instruction Manual	233234	1			←			←			←	
8	Instruction Manual	233326	1			←			←			←	
9	Parts List	523264	1	MX21-01	523265	1	MX21H-01	523266	1	MX24-01	523267	1	MX24H-01
10	Hanging Strap Ass'y	220533	1	Incl.11		←			←			←	
11	Hook	231657	1			←			←			←	

ACCESSORIES-2

(MX27/MX27H/MX33/MX33H)

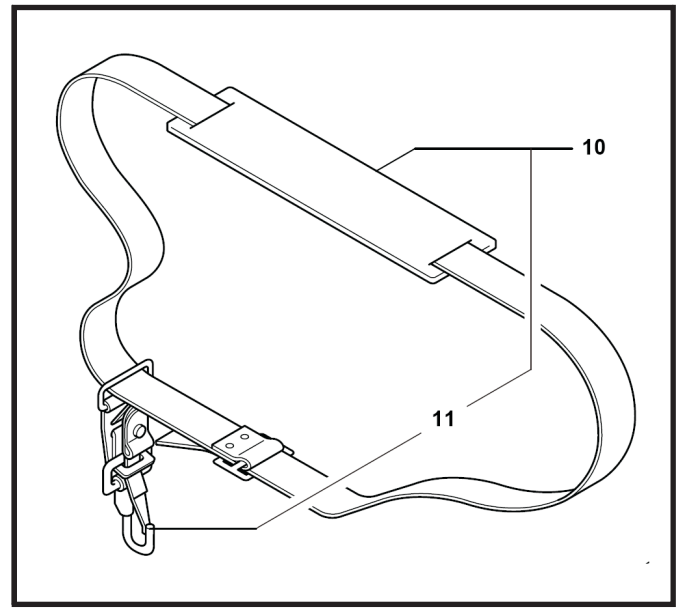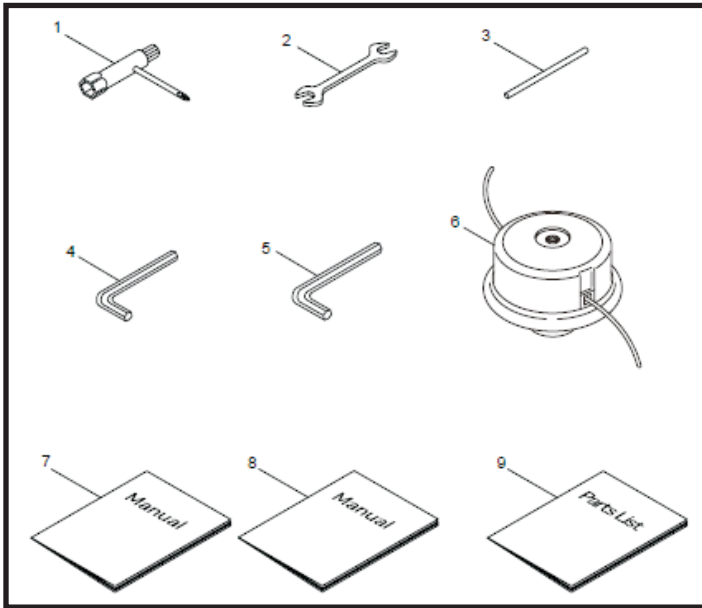

Model		MX27			MX27H			MX33			MX33H		
Ref	Parts name	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE	P/N	QTY	RE
1	Box Spanner	210418	1	13x19x(+)	←			←			←		
2	Double-ended Wrench	022865	1	8x10	←			←			←		
3	Lever Handle	210181	1	3.5x170L	←			←			←		
4	Wrench	219432	1	4mm	←			←			←		
5	Wrench	219433	1	5mm	←			←			←		
6	Semi-Auto Head (L)	232226	1		←			←			←		
7	Instruction Manual	233234	1		←			←			←		
8	Instruction Manual	233326	1		←			←			←		
9	Parts List	523268	1	MX27-01	523269	1	MX27H-01	523270	1	MX33-01	523271	1	MX33H-01
10	Hanging Strap Ass'y	220533	1	Incl.11	←			←			←		
11	Hook	231657	1		←			←			←		